


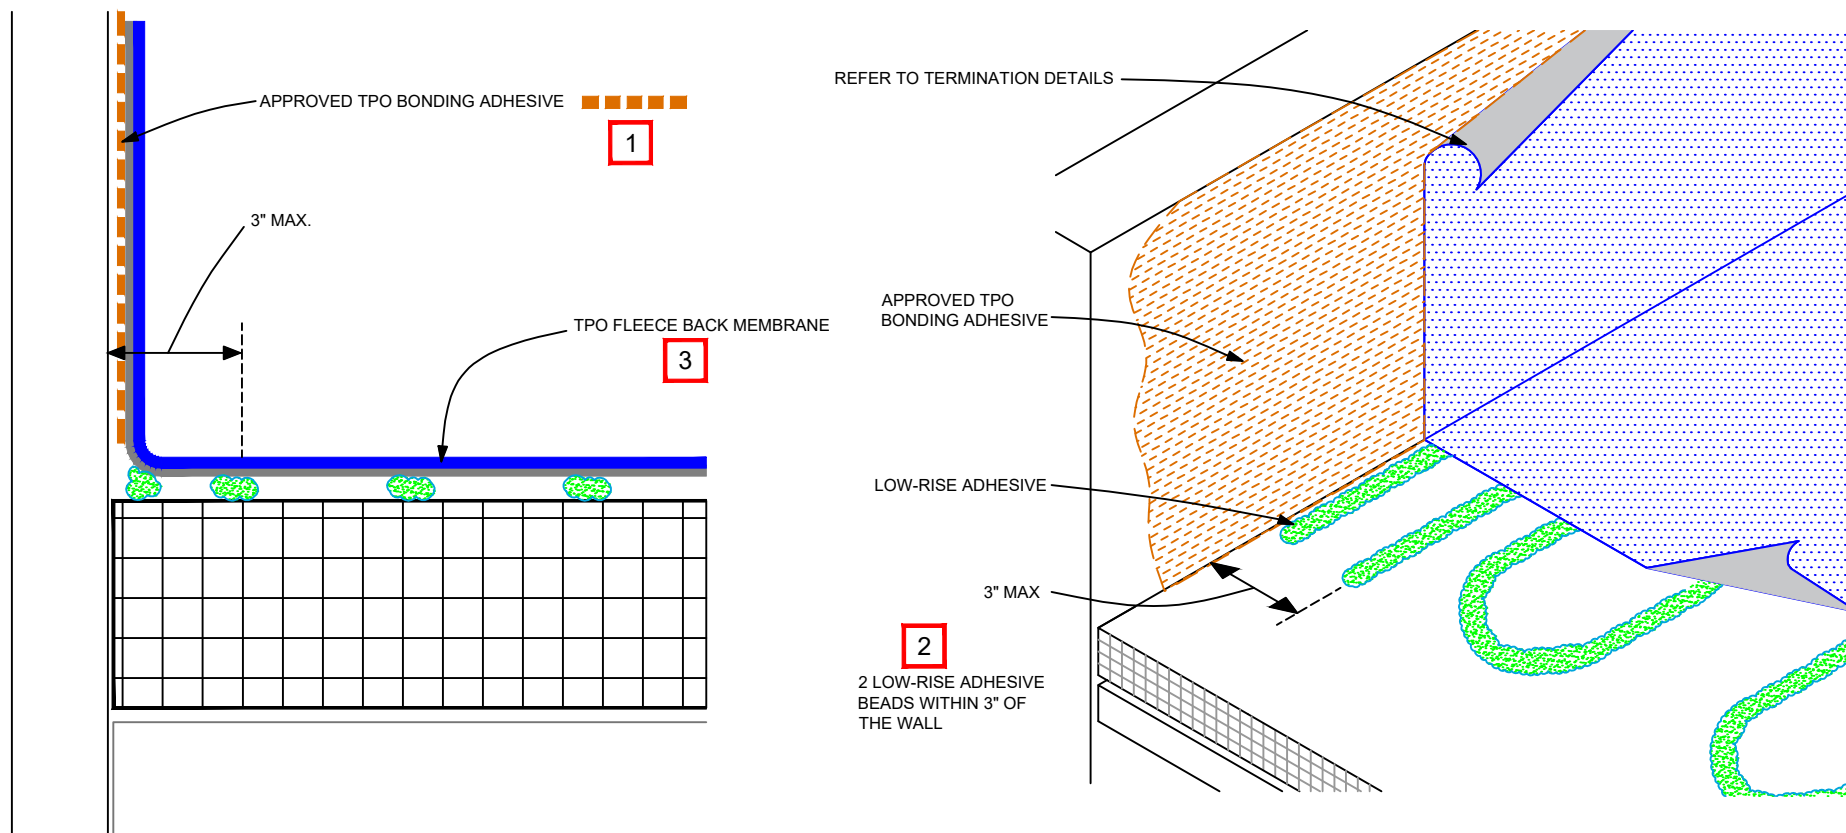

- 1** WHEN APPLYING ROLLER-APPLIED BONDING/CONTACT ADHESIVE ON VERTICAL SURFACES, APPLY A COAT TO THE FLEECE SIDE AND ALLOW TO DRY. ONCE DRY, APPLY A COAT TO THE SUBSTRATE, AND A SECOND COAT TO THE FLEECE BACKING SIDE. EXPECT APPROXIMATELY A THIRD LESS COVERAGE THAN PUBLISHED COVERAGE RATES.
WITH AEROWEB, A 50% OVERLAP ON VERTICAL SURFACES PER THE PUBLISHED COVERAGE RATE IS ACCEPTABLE.
- 2** NOTE THE FOLLOWING WHEN DETAIL EXISTS AT A PERIMETER PARAPET WALL:
 - FASTENER SPACING IS REQUIRED AT 6" O.C. FOR WARRANTIES EXCEEDING 90 MPH WIND SPEED COVERAGE OR FOR WARRANTIES GREATER THAN 20 YEARS.
- 3** DETAIL NOT APPLICABLE WITH FLEECE BACK "PLUS" MEMBRANE

APPLICABLE FIELD MEMBRANE (AND SYSTEMS)
TPO FLEECE BACK (ADHERED)

MULEHIDE

TPO FB WALL BASE ATTACHMENT W/ LOW RISE

WHEN THE SYSTEM TYPE AND PROJECT DESIGN PERMIT, THIS DETAIL IS
ACCEPTABLE FOR : **MAXIMUM 30 YEAR WARRANTY**

DETAIL NO.:
TP-WF-C213

REVISION DATE: 8/24/2026