
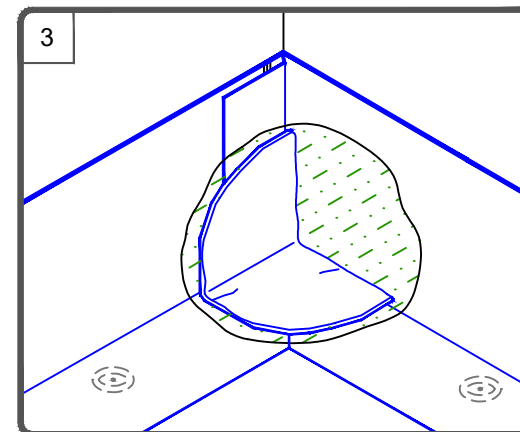
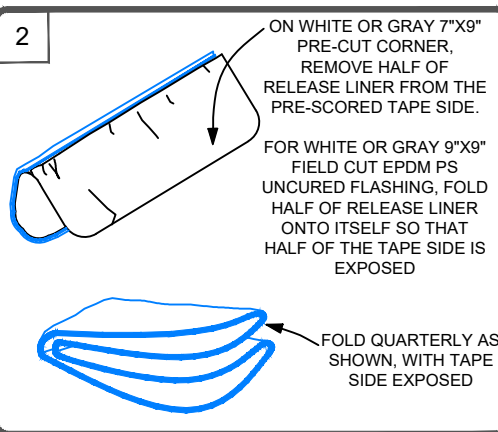




HEAT WELD  
VERTICAL SEAM

CURB OR WALL FLASHING W/ TPO  
REINFORCED MEMBRANE

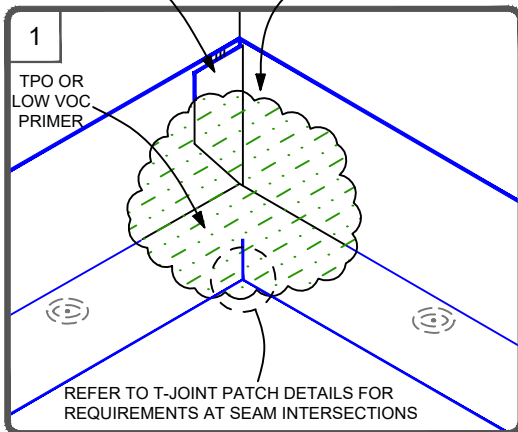


PLACE THE INSIDE CORNER FLASHING ONTO ONE SIDE OF THE DECK FIRST AND TRANSITION UP THE VERTICAL SURFACE.

REMOVE THE REMAINING RELEASE LINER AND WORK ONTO THE ADJOINING WALL, FORMING A PIG EAR, APPLY TPO OR LOW VOC PRIMER TO SIDE OF PIG EAR AND TO WALL, THEN TACK PIG EAR TO WALL.

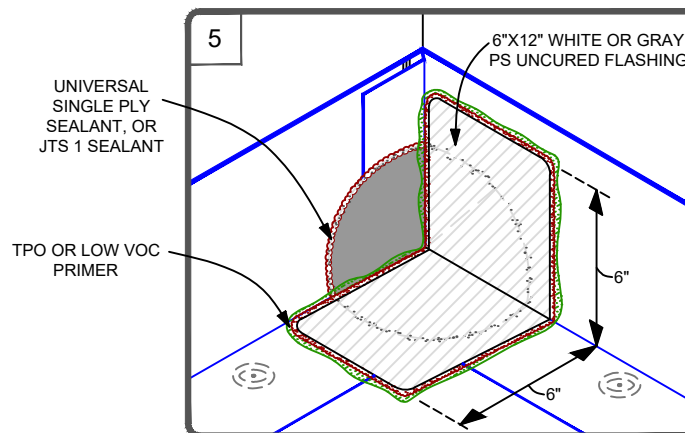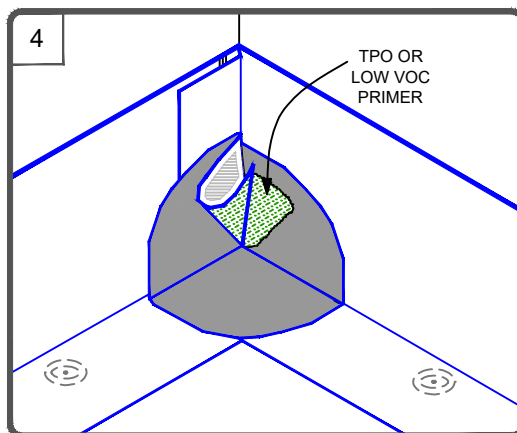

AFTER PRIMING WITH TPO OR LOW VOC PRIMER, INSTALL A 6"X12" PIECE OF WHITE OR GRAY EPDM PRESSURE-SENSITIVE UNCURED-FLASHING TO THE DECK AND WALL AS SHOWN

ROLL WITH 2" WIDE ROLLER



**A** WHITE OR GRAY EPDM PS CURB WRAP W/ 20" TAPE MAY ALSO BE USED FOR CURB WALL FLASHING. IF USED, THEN PRIME THE INSIDE CORNER AREA WITH LOW VOC PRIMER.

APPLICABLE FIELD MEMBRANE (AND SYSTEMS)  
TPO REINFORCED (ADHERED) (MECHANICALLY ATTACHED) (INDUCTION WELDED)  
TPO FLEECE BACK (ADHERED) (MECHANICALLY ATTACHED)  
TPO SELF-ADHERING (ADHERED)

**MULEHIDE**

TPO INSIDE CORNER W/ WHITE OR GRAY EPDM PS UNCURED FLASHING

WHEN THE SYSTEM TYPE AND PROJECT DESIGN PERMIT, THIS DETAIL IS ACCEPTABLE FOR : **MAXIMUM 20 YEAR WARRANTY**

**DETAIL NO.:**  
**TP-CR-A709**

REVISION DATE: 8/24/2026