

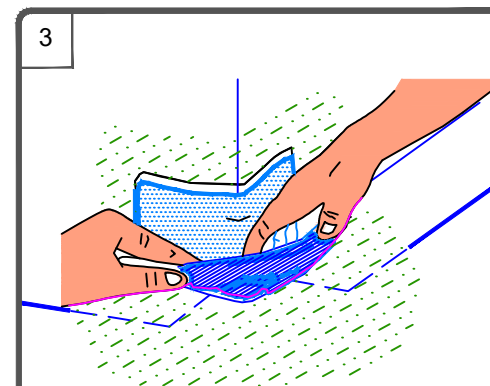
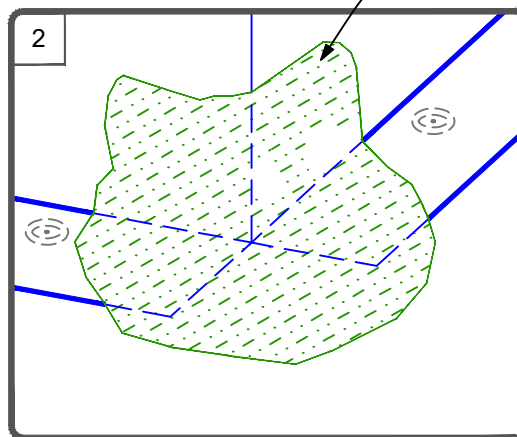


B TPO REINFORCED MEMBRANE

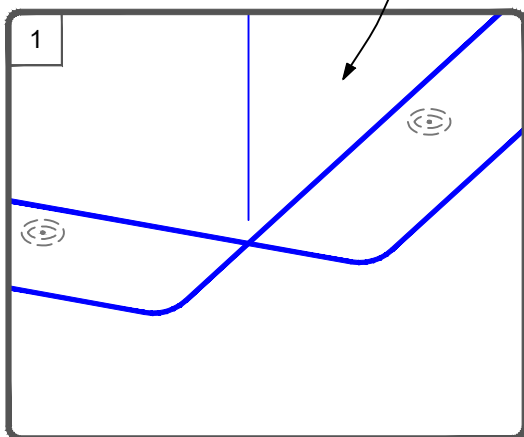

REMOVE THE RELEASE LINER FROM THE TAPE SIDE, AND ALSO THE POLY BACKING. FOLD THE 7"X9" EPDM CORNER FLASHING IN HALF, THEN CENTER IN PLACE WITH THE 9" LENGTH DIMENSION RUNNING LATERAL. APPLY ON THE "WALL FIRST".

CREASE THE FLASHING INTO THE ANGLE CHANGE AT THE BASE, THEN WORK FROM THE CENTER OUTWARD TO STRETCH AND INSTALL ONTO THE DECK MEMBRANE.

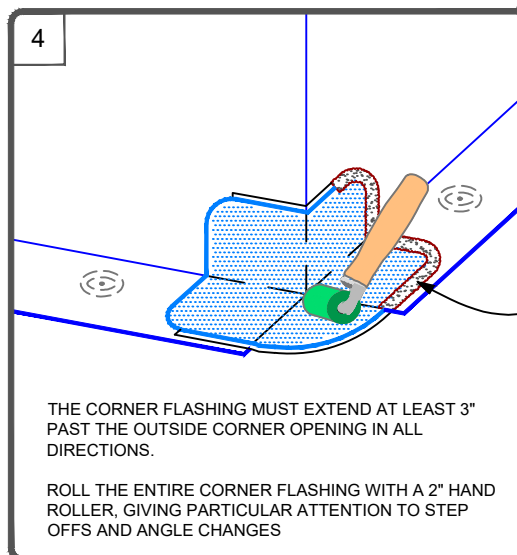

UNIVERSAL SINGLE-PLY SEALANT, OR JTS 1 SEALANT

THE CORNER FLASHING MUST EXTEND AT LEAST 3" PAST THE OUTSIDE CORNER OPENING IN ALL DIRECTIONS.

ROLL THE ENTIRE CORNER FLASHING WITH A 2" HAND ROLLER, GIVING PARTICULAR ATTENTION TO STEP OFFS AND ANGLE CHANGES

A IN COLDER TEMPERATURES, APPLYING HEAT TO THE PRESSURE-SENSITIVE UNCURED FLASHING WITH A HEAT GUN IMMEDIATELY PRIOR TO INSTALLATION MAY BE NECESSARY FOR ITS ELASTICITY DURING INSTALLATION.

B WHITE OR GRAY EPDM PS CURB WRAP W/ 20" TAPE MAY ALSO BE USED FOR CURB WALL FLASHING. IF USED, THEN PRIME THE OUTSIDE CORNER AREA WITH LOW VOC PRIMER.

APPLICABLE FIELD MEMBRANE (AND SYSTEMS)
TPO REINFORCED (ADHERED) (MECHANICALLY ATTACHED) (INDUCTION WELDED)
TPO FLEECE BACK (ADHERED) (MECHANICALLY ATTACHED)
TPO SELF-ADHERING (ADHERED)

MULEHIDE

TPO OUTSIDE CORNER: 7" X 9" PRE-CUT WHITE OR GRAY EPDM
INSIDE/OUTSIDE CORNERS

WHEN THE SYSTEM TYPE AND PROJECT DESIGN PERMIT, THIS DETAIL IS
ACCEPTABLE FOR : **MAXIMUM 20 YEAR WARRANTY**

DETAIL NO.:
TP-CR-A703

REVISION DATE: 8/24/2026