


NOTES:

1. Wood blocking may be slotted for venting of wet-fill decks or other applicable constructions.
2. Wood blocking may be required at drain, depending on insulation thickness and type (not shown for clarity).
3. For heat fused membrane applications, set metal flashing onto heated softened membrane.
4. Membrane end laps to be a minimum 6" and fully adhered at all membrane to membrane seams.
5. Drain Installation and re-equipment by others.

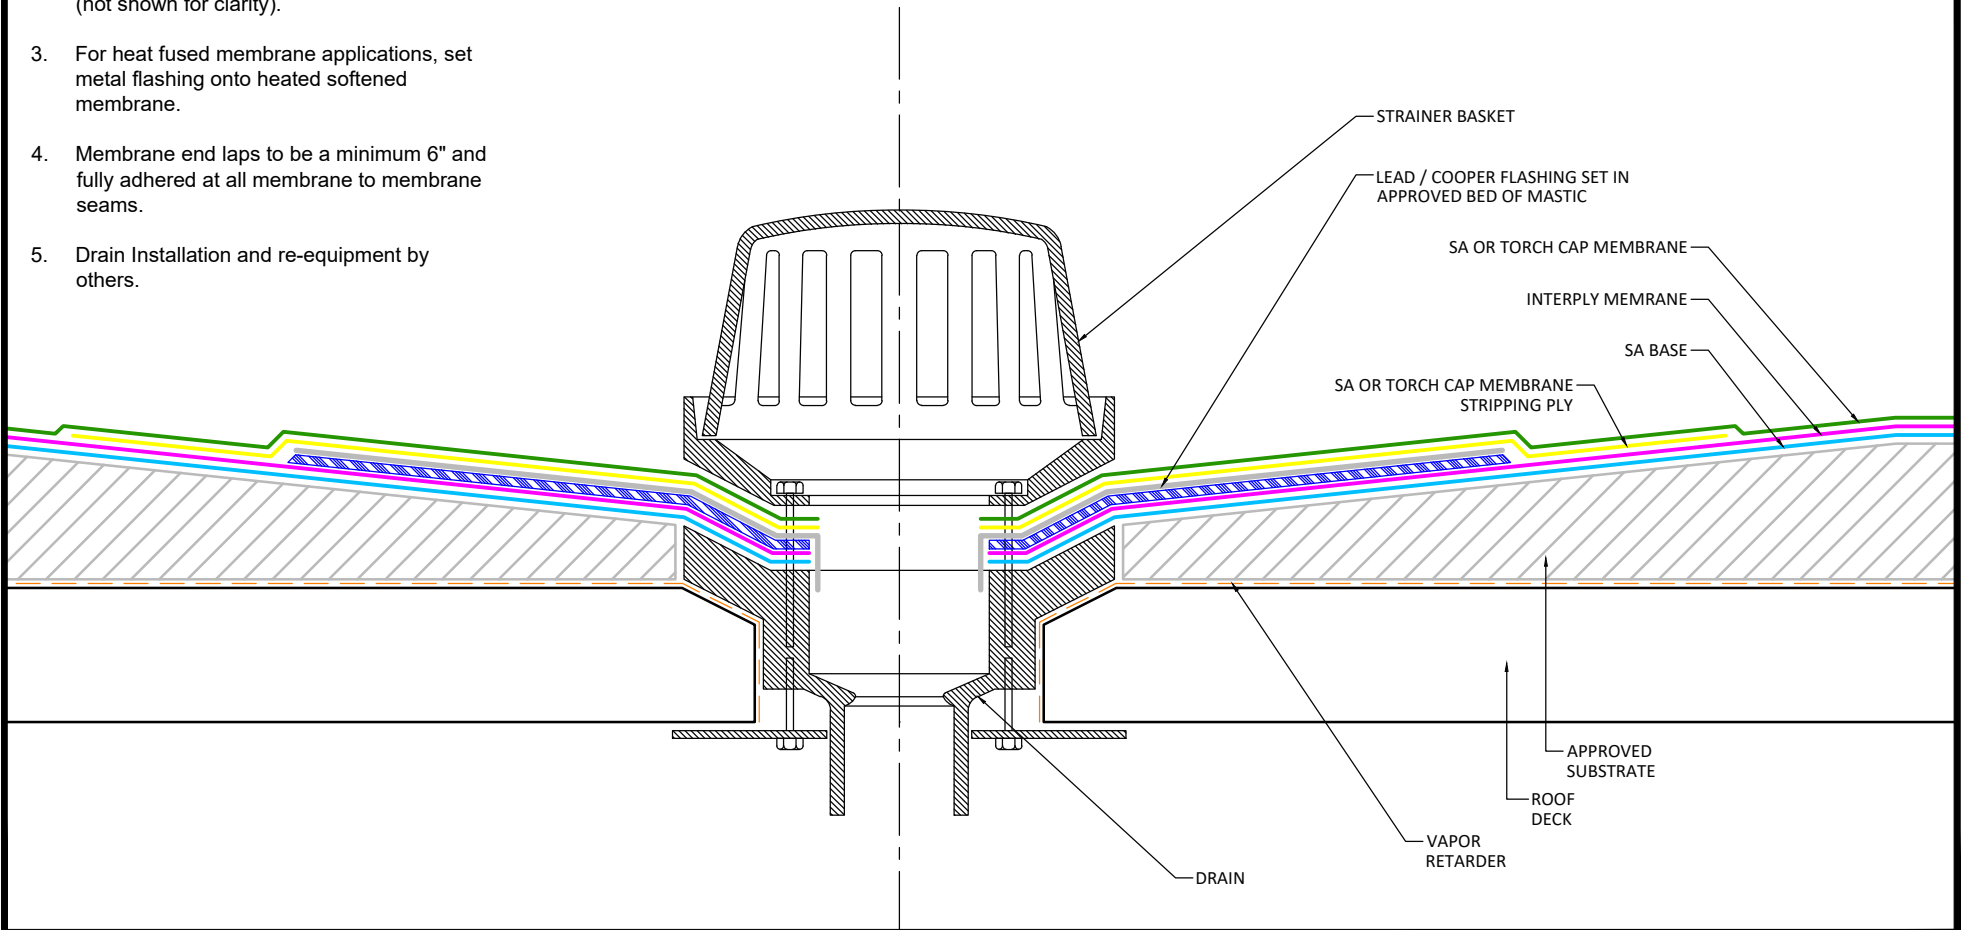

APPLICABLE SYSTEMS (AND MEMBRANES)
SELF ADHERED
TORCH APPLIED

MULEHIDE

DRAIN FLASHING DETAIL 3 PLY APPLICATION WITH VAPOR RETARDER

MAXIMUM WARRANTY:
20 YEARS MAX

DETAIL NO.:

MB-DR-A401

REVISION DATE: 6/8/2026