

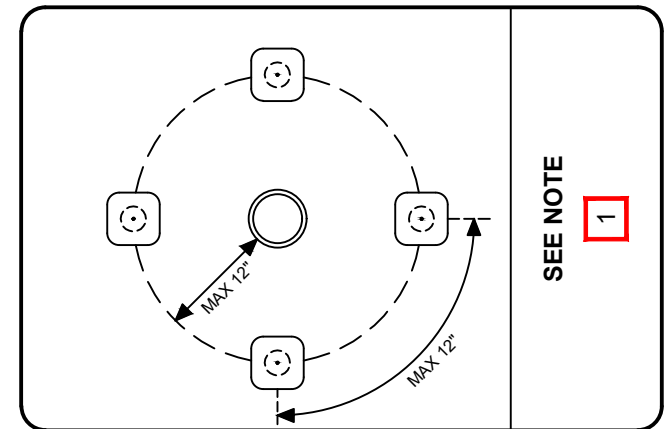
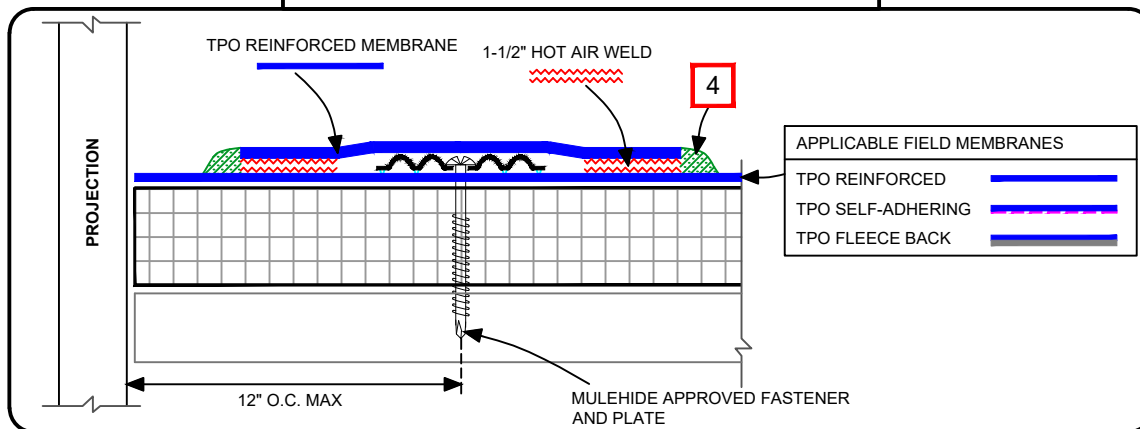


METHOD A - FASTENER AND PLATE W/ PATCH

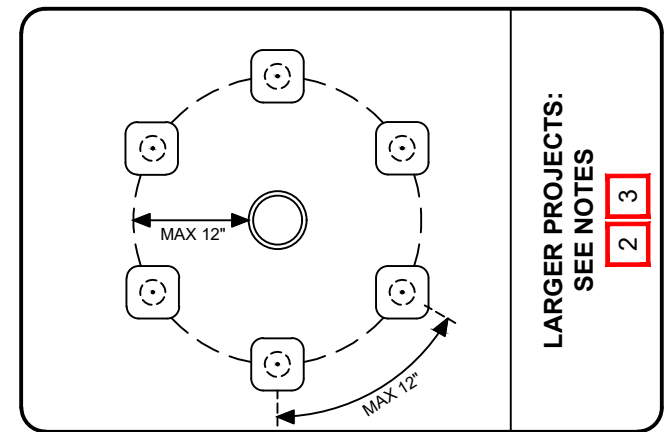

METHOD B - INDUCTION WELDED PLATE

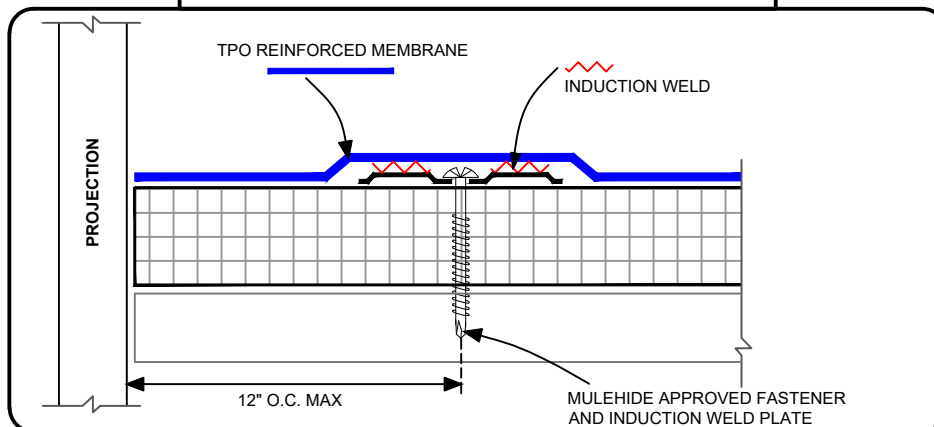

1 ON ALL MECHANICALLY ATTACHED AND INDUCTION WELDED SYSTEMS: INSTALL A MINIMUM OF 4 FASTENERS AND PLATES SPACED 12" ON CENTER MAX., AS SHOWN.

2 ON ALL MECHANICALLY ATTACHED AND INDUCTION WELDED SYSTEMS: LARGER PROJECTIONS WILL REQUIRE ADDITIONAL FASTENERS AND PLATES IN ORDER TO NOT EXCEED 12" ON CENTER MAX SPACING.

3 ON ADHERED SYSTEMS: FASTENERS AND PLATES ARE NOT REQUIRED UNLESS THE PROJECTION DIAMETER EXCEEDS 18".

4 APPROX. 1/8" BEAD OF CUT-EDGE SEALANT IS REQUIRED ON CUT EDGES OF TPO REINFORCED MEMBRANE

APPLICABLE FIELD MEMBRANE (AND SYSTEMS)
TPO REINFORCED (ADHERED) (MECHANICALLY ATTACHED) (INDUCTION WELDED)
TPO FLEECE BACK (ADHERED) (MECHANICALLY ATTACHED: 20 YR MAX)
TPO SELF-ADHERING (ADHERED)

MULEHIDE

TPO: ADDITIONAL SECUREMENT AROUND PROJECTIONS
W/ HEAT WELDED PATCH OR IW PLATES

WHEN THE SYSTEM TYPE AND PROJECT DESIGN PERMIT, THIS DETAIL IS
ACCEPTABLE FOR : **MAXIMUM 30 YEAR WARRANTY**

DETAIL NO.:
TP-PP-C518

REVISION DATE: 8/24/2026