
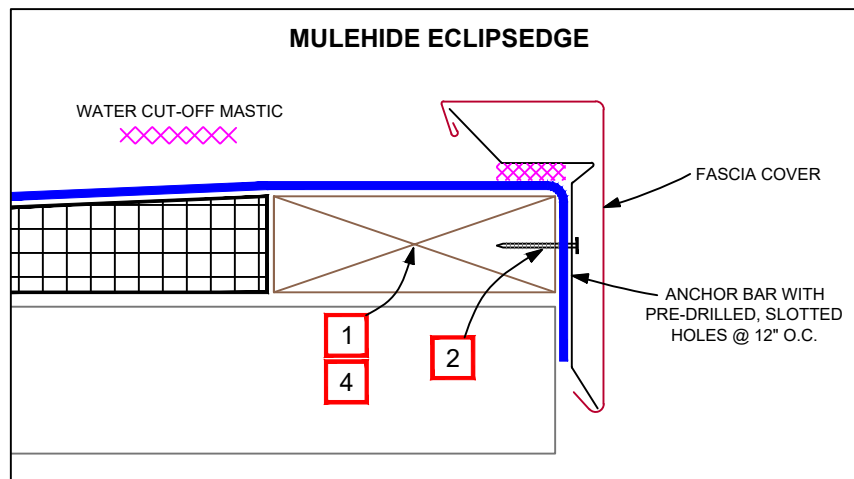
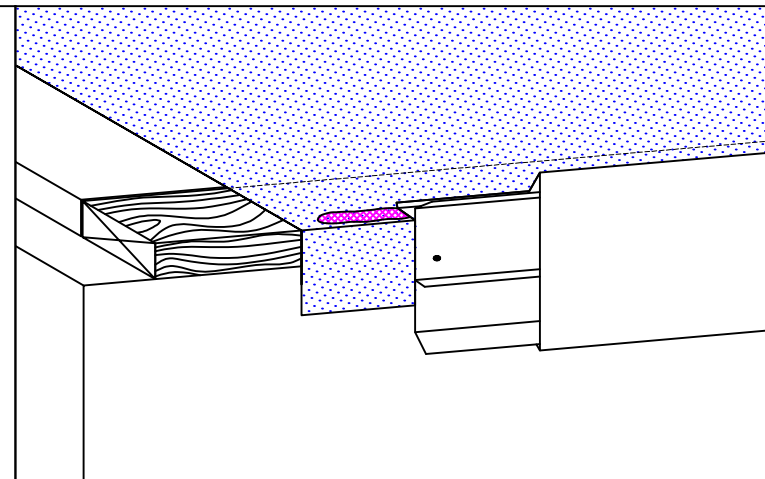


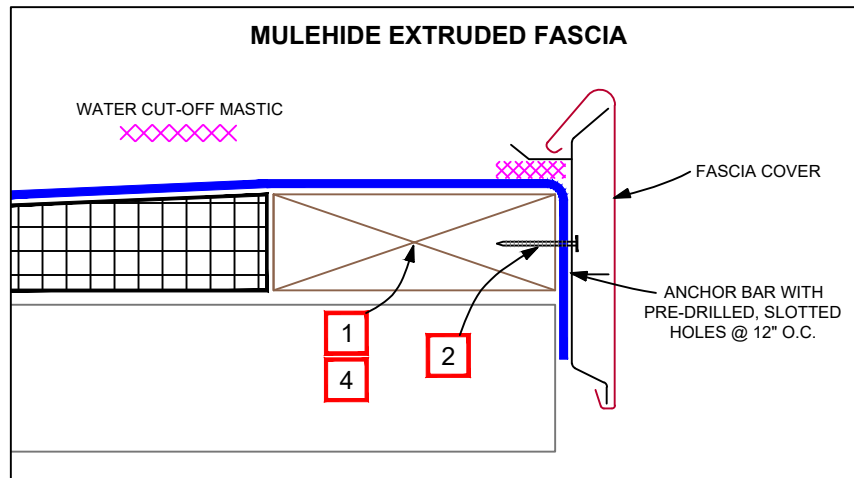

- 1** WOOD NAILERS (BY OTHERS) MUST BE SECURELY FASTENED. FACTORY MUTUAL'S PROPERTY LOSS PREVENTION DATA SHEET 1-49 IS A REFERENCE FOR SECUREMENT CRITERIA.
- 2** USE FASTENERS PROVIDED WITH ECLIPSEEDGE OR EXTRUDED FASCIA METAL AND FASTEN INTO PRE-DRILLED HOLES.
- 3** ENSURE THE ROOF IS NOT SLOPING TOWARD THIS DETAIL, AND THAT DRAINAGE IS NOT RESTRICTED
- 4** SUPPLEMENTAL WOOD NAILER CONDITIONS OCCUR ON METAL RETROFITS: REFER TO APPLICABLE DETAILS **TP-EM-C121, TP-EM-C122, TP-EM-C125, OR TP-EM-C126**

APPLICABLE FIELD MEMBRANE (AND SYSTEMS)
 TPO REINFORCED (ADHERED) (MECHANICALLY ATTACHED) (INDUCTION WELDED)
 TPO FLEECE BACK (ADHERED) (MECHANICALLY ATTACHED: 20 YR MAX)
 TPO SELF-ADHERING (ADHERED)

MULEHIDE

TPO : MULEHIDE ECLIPSEEDGE OR EXTRUDED
 FASCIA EDGE METAL

WHEN THE SYSTEM TYPE AND PROJECT DESIGN PERMIT, THIS DETAIL IS
 ACCEPTABLE FOR : **MAXIMUM 30 YEAR WARRANTY**

DETAIL NO.:
TP-EM-C117

REVISION DATE: 8/24/2026