


# INDUSTRIAL DOWNSPOUT



CLOSED DOWNSPOUT, STYLE 2 DOWNSPOUT STRAP VERSION

INSTALLATION INSTRUCTIONS

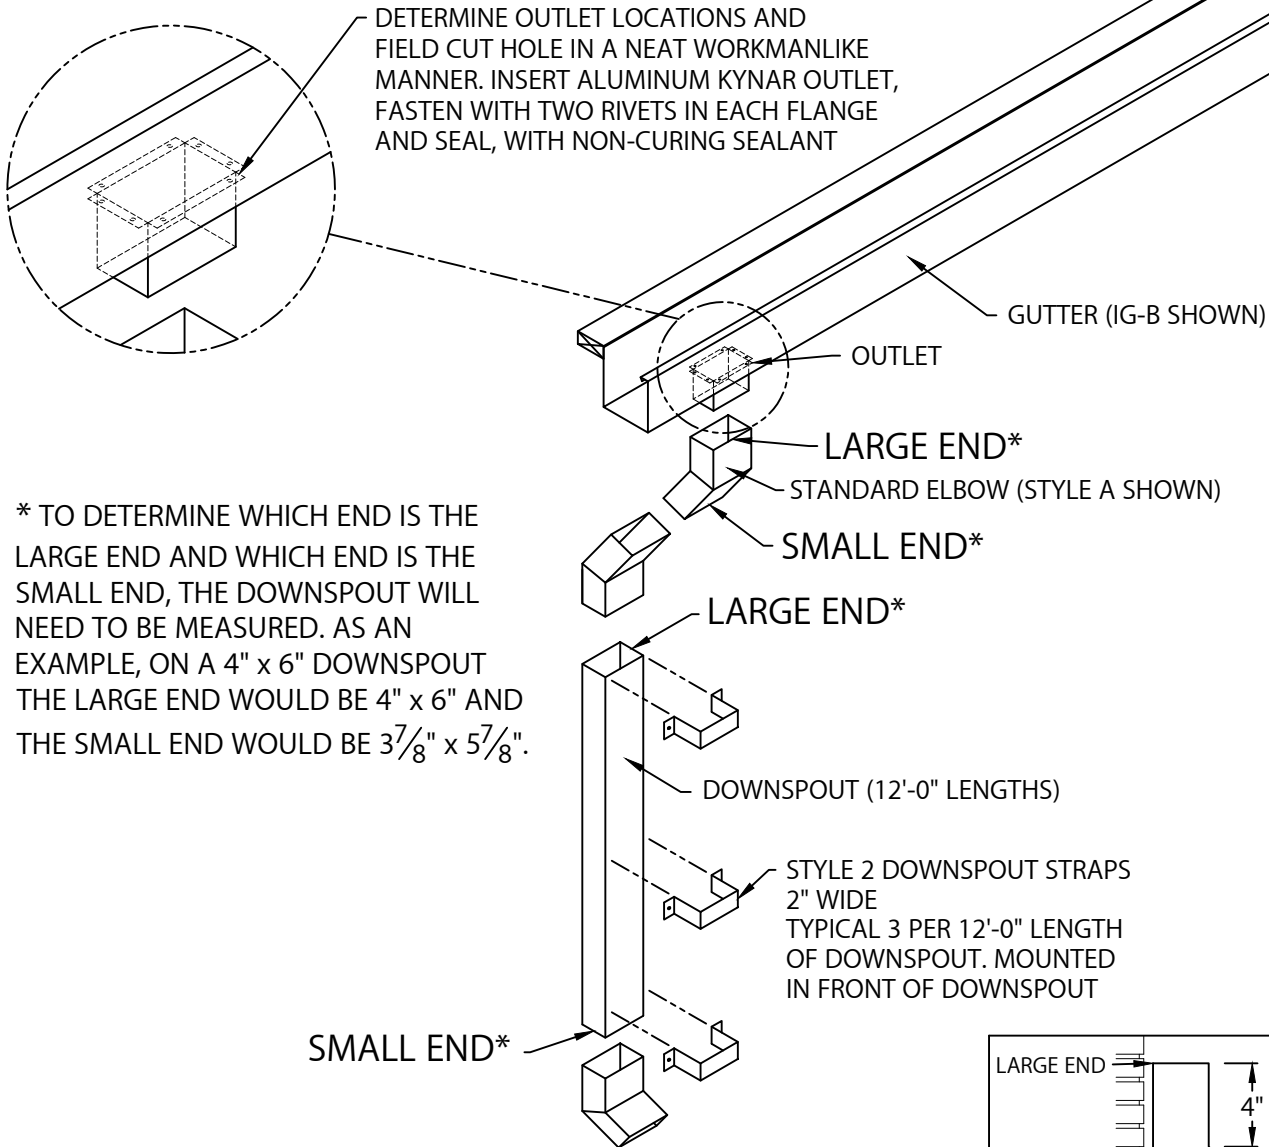


\* TO DETERMINE WHICH END IS THE LARGE END AND WHICH END IS THE SMALL END, THE DOWNSPOUT WILL NEED TO BE MEASURED. AS AN EXAMPLE, ON A 4" x 6" DOWNSPOUT THE LARGE END WOULD BE 4" x 6" AND THE SMALL END WOULD BE 3<sup>7</sup>/<sub>8</sub>" x 5<sup>7</sup>/<sub>8</sub>".

## DOWNSPOUT SECTION

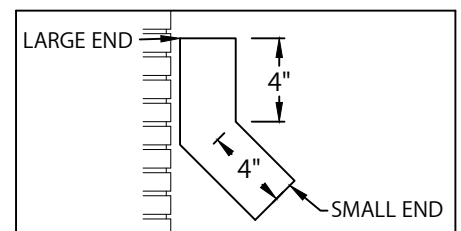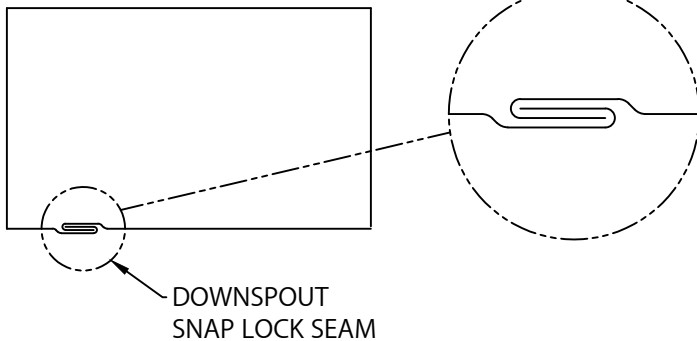

STYLE A DOWNSPOUT

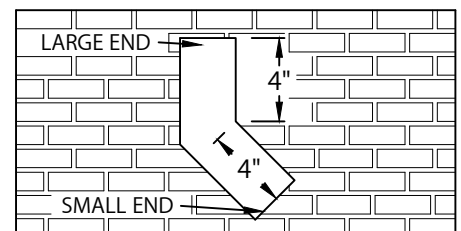

STYLE B DOWNSPOUT



1195 PRINCE HALL DRIVE  
BELIOT, WI 53511  
800-786-1492  
WWW.MULEHIDE.COM

DATE: 04/12/24  
DRN BY: MLM  
CKD BY: MM

SHT.# \_\_\_\_ OF \_\_\_\_  
DWG# 52113-42696

A