


NAILER-T METAL ROOF RETROFITS


FLUTE FILL METAL ROOF VERSION

INSTALLATION INSTRUCTIONS

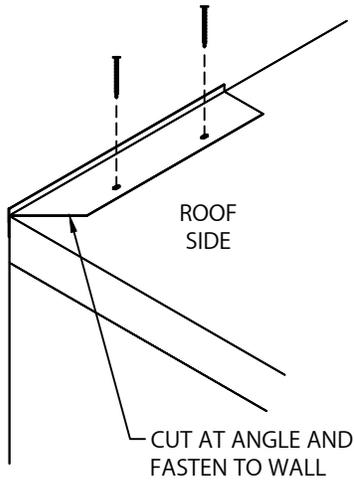


1. OUTSIDE MITER FABRICATION

CUT A PIECE OF NAILER-T (ANY LENGTH) ON AN ANGLE. FASTEN TO WALL 6" O.C. AT CORNER WITH PROVIDED FASTENERS.

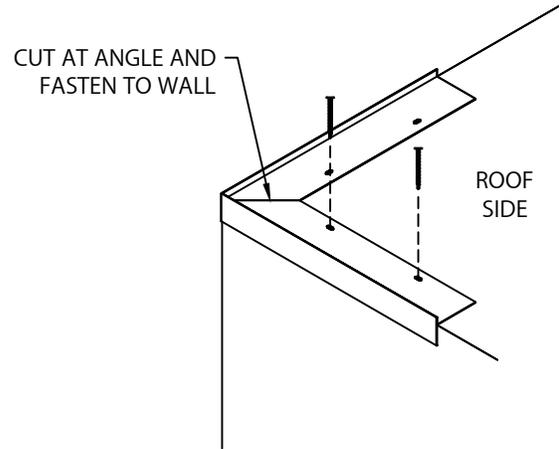

2. OUTSIDE MITER FABRICATION


CUT A SECOND PIECE OF NAILER-T (ANY LENGTH) ON AN ANGLE TO FORM A COMPLETE MITER. FASTEN TO WALL AT CORNER WITH PROVIDED FASTENERS 6" O.C.

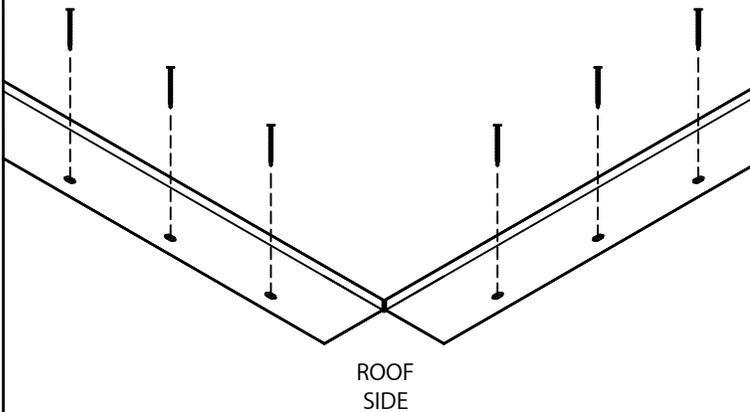

3. INSIDE MITERS

NO BAR CUTTING IS NEEDED FOR INSIDE MITERS. SIMPLY BUTT FULL SIZE BARS TIGHT INTO CORNER AND FASTEN TO WALL 6" O.C. WITH PROVIDED FASTENERS.

TYPICAL INSTALLATION

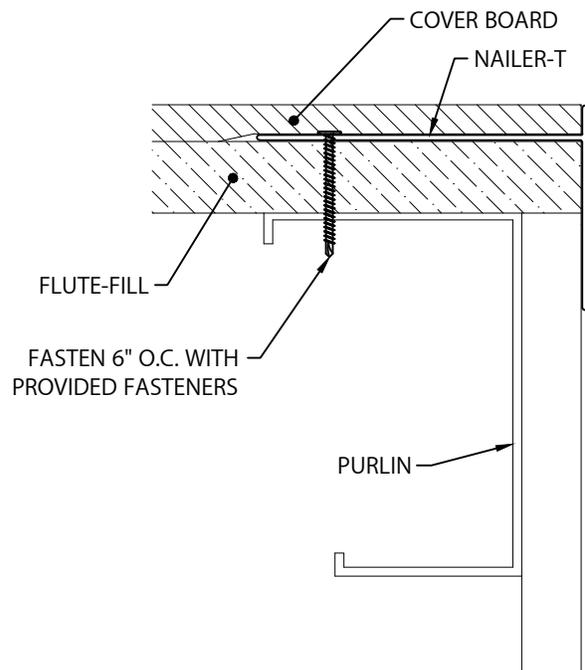

1195 PRINCE HALL DRIVE
BELIOT, WI 53511
800-786-1492
WWW.MULEHIDE.COM

DATE: 10/24/24

DRN BY: LKW

CKD BY: MM


SHT.# 1 OF 2

DWG# 52118-44088

A

NAILER-T METAL ROOF RETROFITS

FLUTE FILL METAL ROOF VERSION

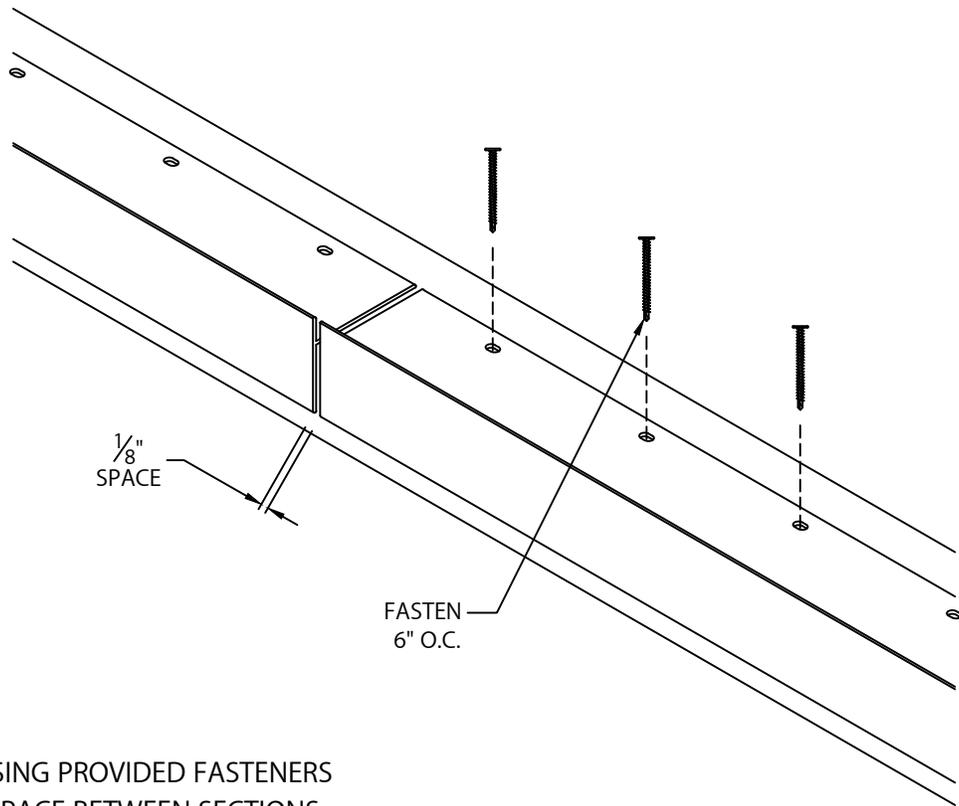

4. NAILER-T

FASTEN NAILER-T USING PROVIDED FASTENERS
6" O.C. LEAVE A 1/8" SPACE BETWEEN SECTIONS.



1195 PRINCE HALL DRIVE
BELIOT, WI 53511
800-786-1492
WWW.MULEHIDE.COM

DATE: 10/24/24
DRN BY: LKW
CKD BY: MM

SHT.# 2 OF 2
DWG# 52118-44088 **A**