


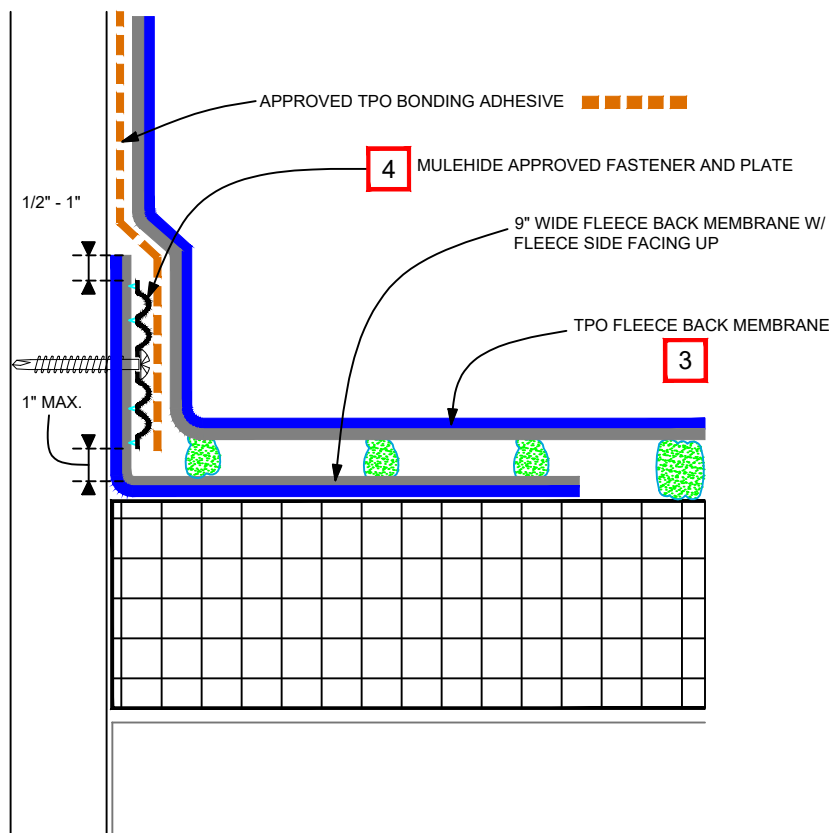

REFER TO TERMINATION DETAILS

APPROVED TPO
BONDING ADHESIVE

LOW-RISE ADHESIVE

2 LOW-RISE ADHESIVE
BEADS WITHIN 3" OF
THE WALL - 3" MAX.

2

12" O.C. MAX

1 WHEN APPLYING ROLLER-APPLIED BONDING/CONTACT ADHESIVE ON VERTICAL SURFACES, APPLY A COAT TO THE FLEECE SIDE AND ALLOW TO DRY. ONCE DRY, APPLY A COAT TO THE SUBSTRATE, AND A SECOND COAT TO THE FLEECE BACKING SIDE. EXPECT APPROXIMATELY A THIRD LESS COVERAGE THAN PUBLISHED COVERAGE RATES.

WITH AEROWEB, A 50% OVERLAP ON VERTICAL SURFACES PER THE PUBLISHED COVERAGE RATE IS ACCEPTABLE.

2 NOTE THE FOLLOWING WHEN DETAIL EXISTS AT A PERIMETER PARAPET WALL:
- FASTENER SPACING IS REQUIRED AT 6" O.C FOR WARRANTIES EXCEEDING 90 MPH WIND SPEED COVERAGE OR FOR WARRANTIES GREATER THAN 20 YEARS.

3 DETAIL NOT APPLICABLE WITH FLEECE BACK "PLUS" MEMBRANE

4 REFER TO SPECIFICATIONS FOR APPROVED FASTENERS BASED ON SUBSTRATE TYPE.

APPLICABLE FIELD MEMBRANE (AND SYSTEMS)
TPO FLEECE BACK (ADHERED)

MULEHIDE

TPO FB WALL ATTACHMENT W/ RUSS: "VERTICAL ATTACHMENT"

WHEN THE SYSTEM TYPE AND PROJECT DESIGN PERMIT, THIS DETAIL IS
ACCEPTABLE FOR : **MAXIMUM 30 YEAR WARRANTY**

DETAIL NO.:
TP-WF-C215

REVISION DATE: 8/24/2026