



ANY APPROVED
TERMINATION

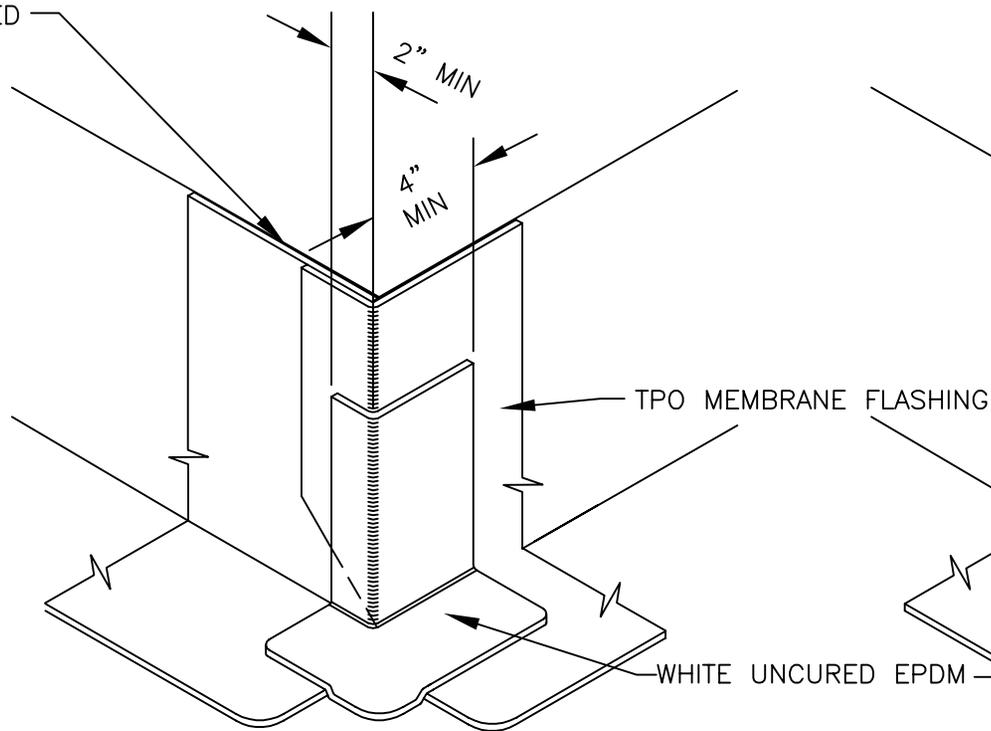

STEP ONE

INSTALL FIRST WHITE UNCURED EPDM PRECUT CORNER OF MINIMUM 6" X 6" WHITE UNCURED FLASHING TAPE WITH 2" MINIMUM WRAPPING AROUND CORNER. (SEE NOTE 1)

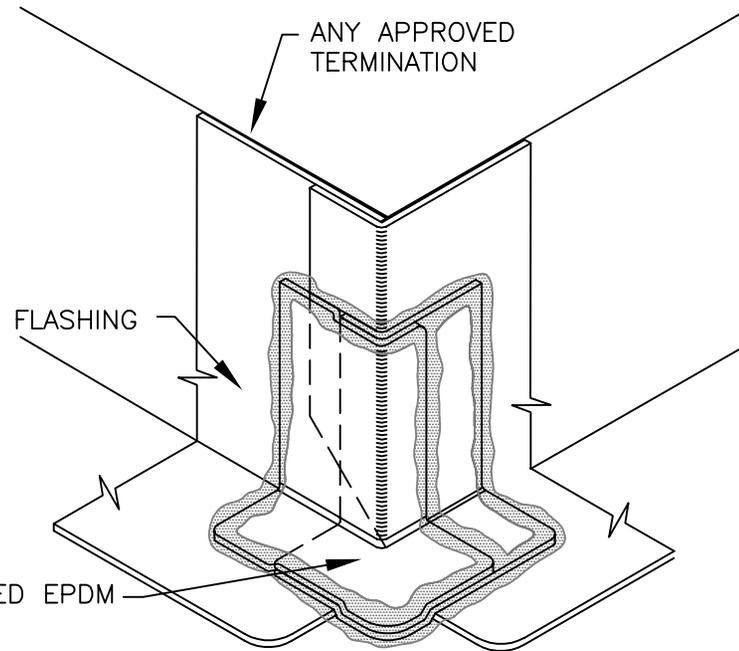

STEP TWO

REPEAT PROCESS IN STEP ONE ON OTHER SIDE OF CORNER. (SEE NOTES 1 AND 2)

NOTES:

1. MUST USE EPDM TAPE PRIMER OR LOW VOC PRIMER WITH ALL EPDM PRODUCTS.
2. UNIVERSAL SINGLE PLY SEALANT AT ALL EDGES OF WHITE UNCURED EPDM FLASHING TAPE.

**MULE-HIDE
PRODUCTS CO., INC.**

**2-PIECE OUTSIDE CORNER
UNCURED EPDM
SYSTEMS:
ALL TPO SYSTEMS**

DETAIL NO.:

MHT-UN-641C

REVISION DATE: 06/2017