PARAPET WALL FLASHING
SURFACE TERMINATION

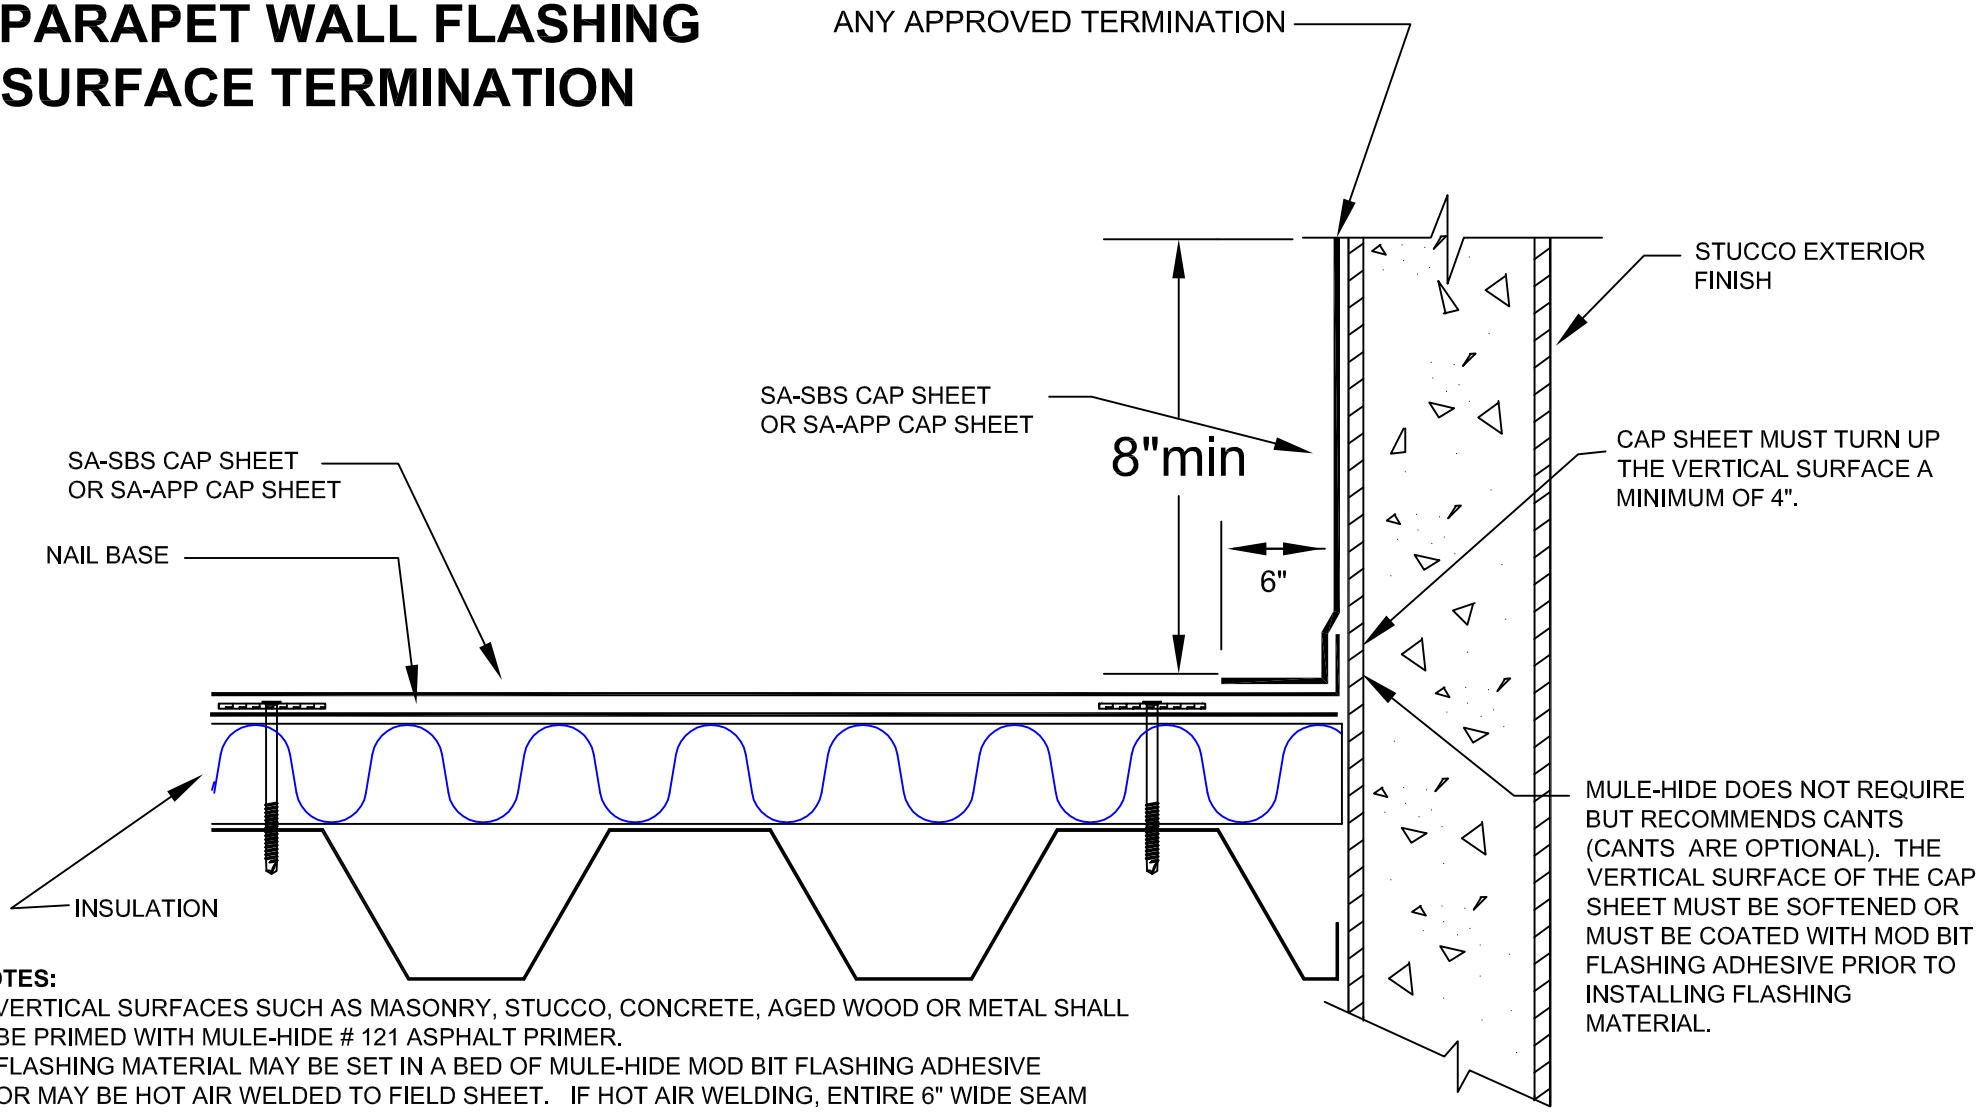

NOTES:

1. VERTICAL SURFACES SUCH AS MASONRY, STUCCO, CONCRETE, AGED WOOD OR METAL SHALL BE PRIMED WITH MULE-HIDE # 121 ASPHALT PRIMER.
2. FLASHING MATERIAL MAY BE SET IN A BED OF MULE-HIDE MOD BIT FLASHING ADHESIVE OR MAY BE HOT AIR WELDED TO FIELD SHEET. IF HOT AIR WELDING, ENTIRE 6" WIDE SEAM MUST BE SEALED.
3. INSULATION SHOULD BE MECHANICALLY ATTACHED SUFFICIENTLY TO HOLD IN PLACE PRIOR TO INSTALLING THE NAIL BASE.
4. NAIL BASE SHALL BE MECHANICALLY ATTACHED IN COMPLIANCE WITH FM ATTACHMENT GUIDELINES. THE MINIMUM ATTACHMENT PATTERN IS FM 1-60. REFER TO DETAIL: MH-MB-NB-FM 1-60.

MULE-HIDE PRODUCTS CO.,INC. 2003	**BASE FLASHING - OPTION 9** **SELF-ADHERING MOD BIT SYSTEMS**	**DETAIL NO.:** **MH-MB-BF9**