


FOR DRAINS WITH TAPERED INSULATION AT DRAIN SUMP  
GREATER THAN 3" TO 12"

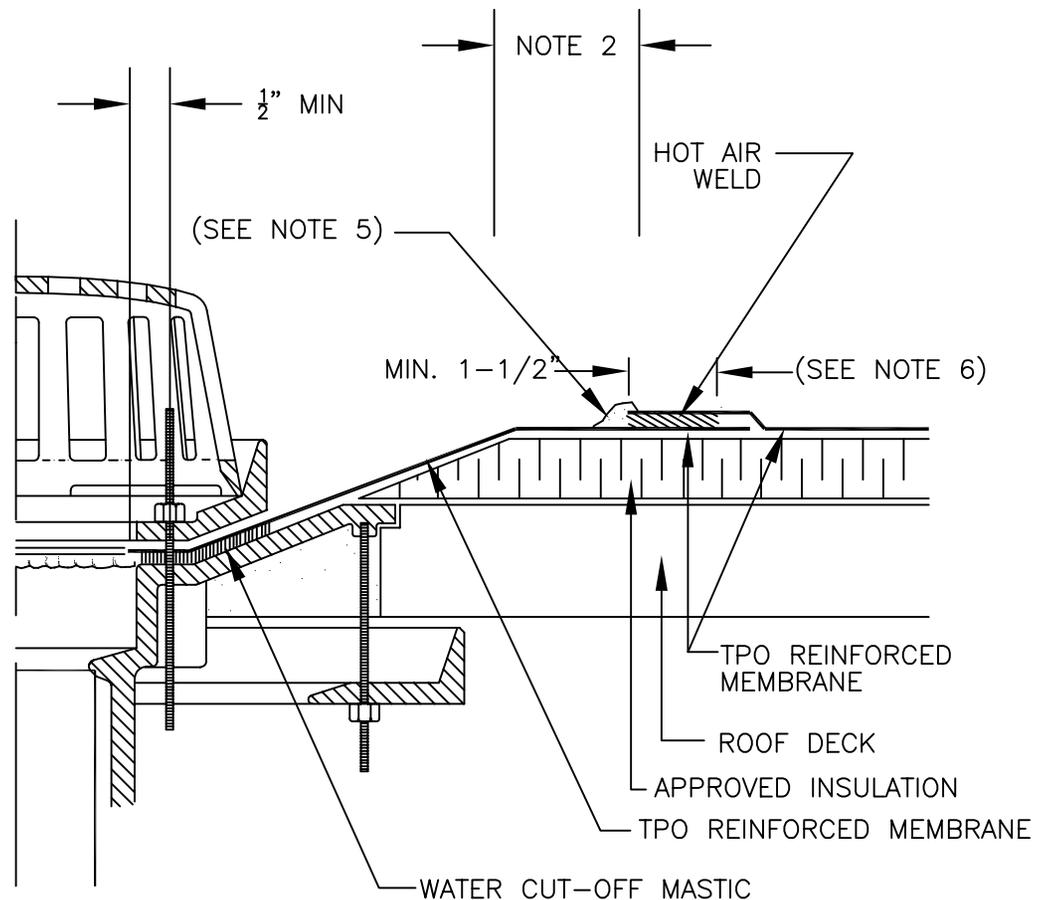

NOTES:

1. REMOVE ALL LEAD AND OTHER FLASHING.
2. EXTEND THE TPO REINFORCED MEMBRANE APPROXIMATELY 5-1/2" OUT OF THE SUMP AREA.
3. ALL BOLTS OR CLAMPS MUST BE IN PLACE TO PROVIDE COMPRESSION ON WATER CUT-OFF MASTIC.
4. CUT THE MEMBRANE SO IT EXTENDS A MINIMUM OF 1/2" FROM THE ATTACHMENT POINTS OF THE DRAIN CLAMPING RING.
5. APPROXIMATELY 1/8" DIAMETER BEAD OF CUT-EDGE SEALANT IS REQUIRED ON CUT EDGE OF TPO REINFORCED MEMBRANE.
6. MECHANICALLY ATTACHED SYSTEMS WILL REQUIRE HDP OR EHD FASTENERS AND 2.4" SEAM PLATES (12" O.C. MAX.) INSTALLED IN TARGET PANELS WITH FIELD SHEET OVERLAPPED AND HOT AIR WELDED (REFER TO DETAIL MHT-MA-510B).

**MULE-HIDE  
PRODUCTS CO., INC.**

**DRAIN FLASHING WITH TARGET PANELS  
DRAIN SUMP SLOPE GREATER THAN 3" TO 12"  
SYSTEMS:**

**ALL TPO SYSTEMS**

**DETAIL NO.:**

**MHT-UN-511A**

REVISION DATE: 10/2013