


NOTES:

1. REFER TO SPECIFICATIONS FOR FLASHING MEMBRANE REQUIREMENTS.
2. WOOD NAILERS MATCHING THE INSULATION THICKNESS AND EXTENDING BEYOND THE FLANGE ARE REQUIRED.
3. ALL SEAMS OVER GRANULATED SURFACES MUST BE COMPLETED WITH EITHER HOT AIR WELDING OR MH 421 MOD BIT ADHESIVE.

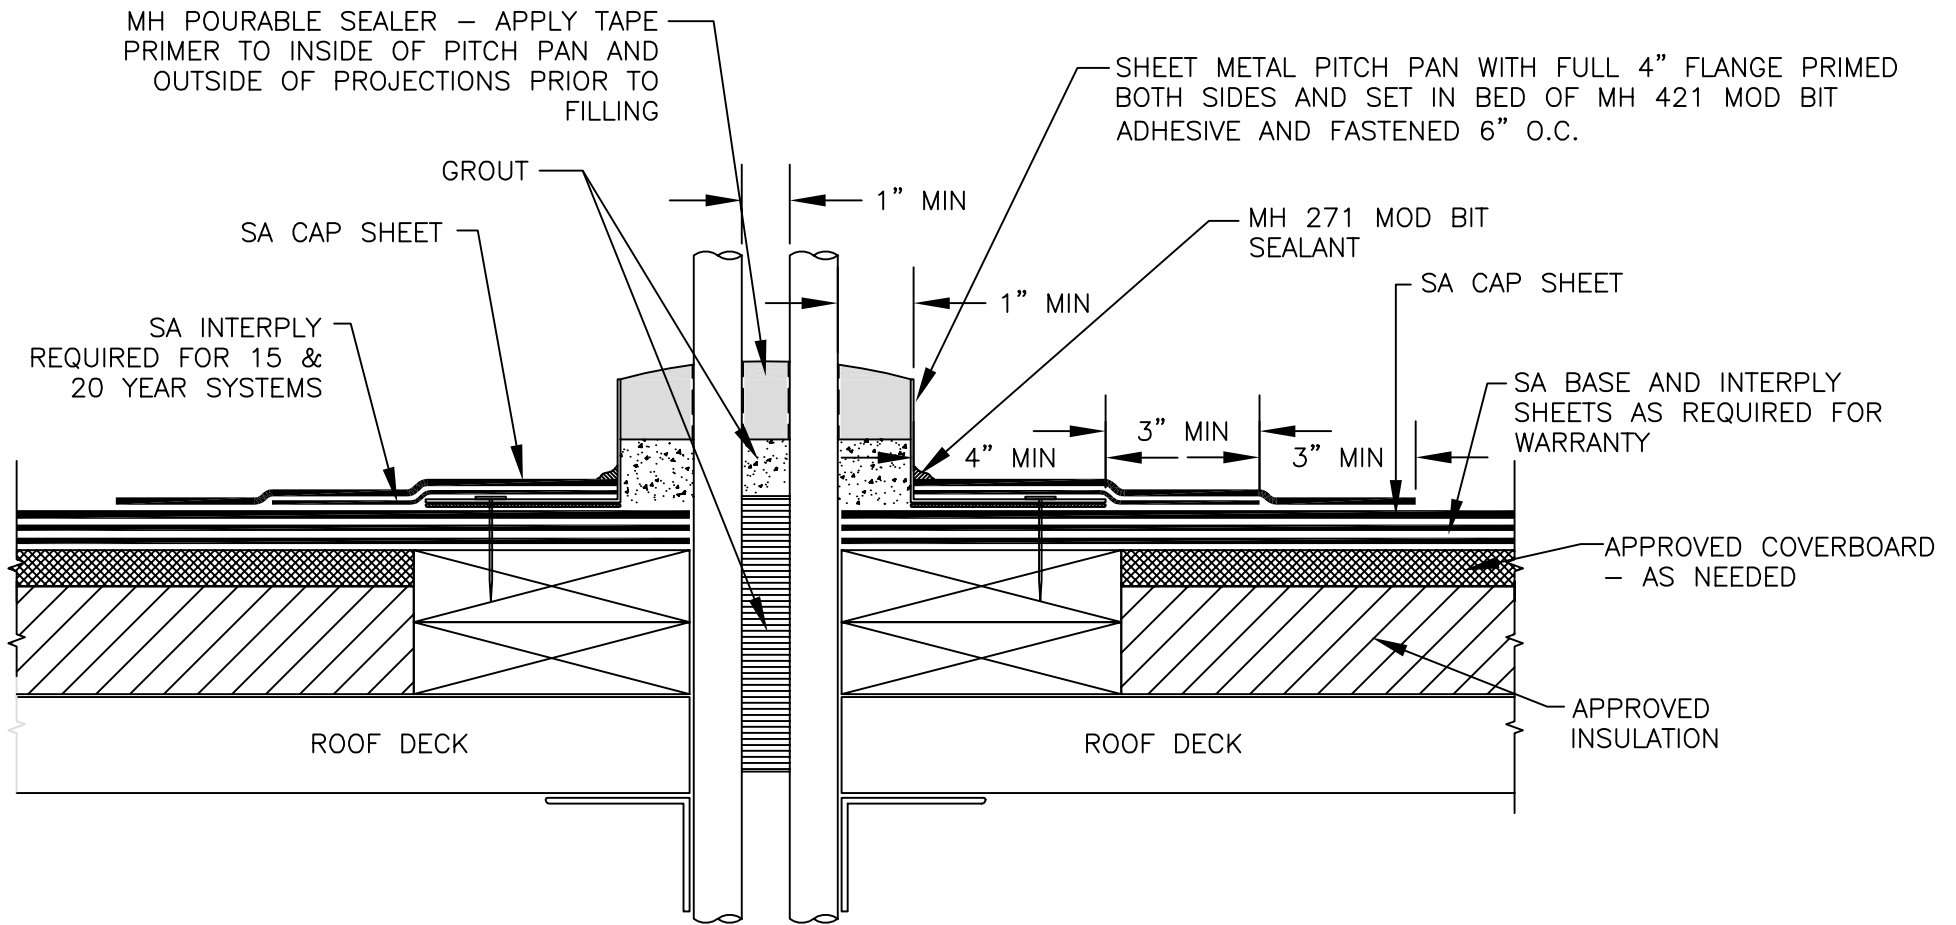

**MULE-HIDE  
PRODUCTS CO., INC.**

**PENETRATION POCKET**

**SYSTEMS:  
SELF-ADHERING  
MODIFIED BITUMEN**

**DETAIL NO.:**

**MHMB-141**

REVISION DATE: MARCH 2017