


NOTES:

1. SPLICE CLEATS ARE REQUIRED WHEN FACE SIZE IS 4" OR GREATER. SPLICE CLEATS ARE INSTALLED 24" ON CENTER USING FOUR APPROVED FASTENERS. (MUST POSITION A CLEAT AT EACH JOINT)
2. FASTENERS ARE SPACED NO GREATER THAN 6" ON CENTER.
3. WHEN MORE THAN ONE ARCHED DRIP EDGE IS USED, INSTALL THE DRIP EDGE TO SHED WATER DOWN THE ARCH BY CENTERING ONE SECTION AT THE TOP OF THE ARCH.
4. THIS DETAIL REQUIRES THE 8" WIDE STRIPPING TO BE FIELD WELDED.
5. EDGES PRE-NOTCHED FOR AN OVERLAPPED JOINT. APPLY AN APPROVED SEALANT AT ALL JOINTS.
6. USE STAINLESS STEEL FASTENERS WHEN ATTACHING INTO ACQ TREATED WOOD.

NOTE:

THIS DETAIL QUALIFIES TO BE INCLUDED IN ANY MULE-HIDE LABOR AND MATERIAL WARRANTY

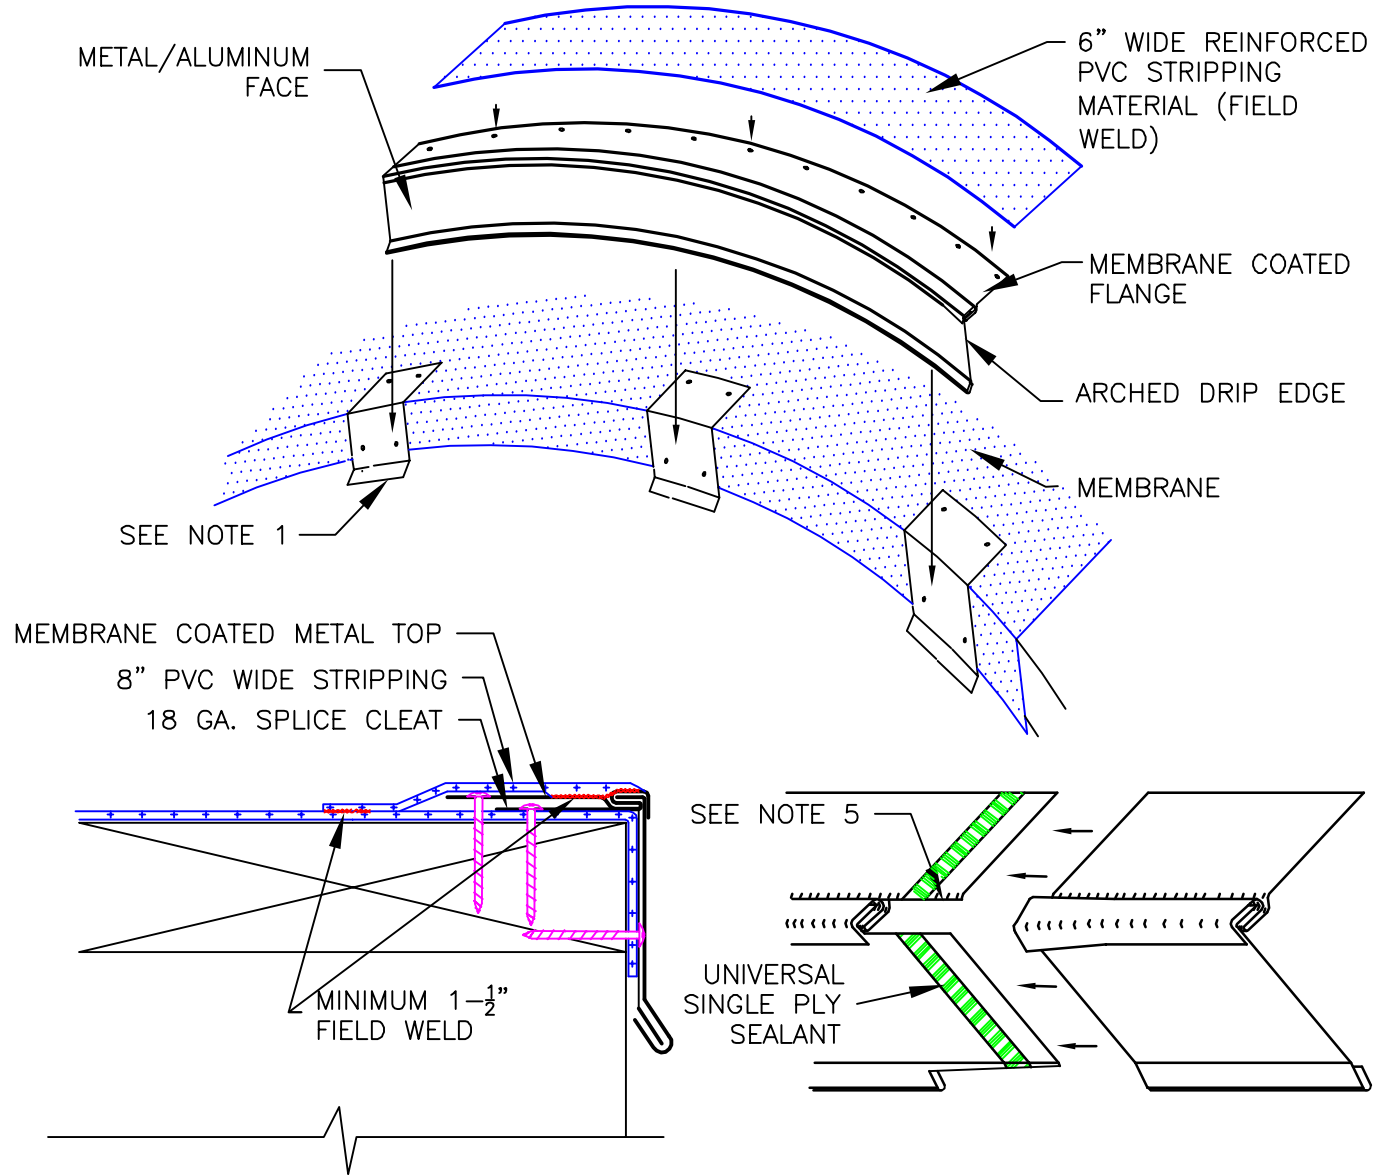

**MULE-HIDE
PRODUCTS CO., INC.**

**MULE-HIDE PREMANUFACTURED
ARCHED DRIP EDGE WITH SPLICE CLEAT
SYSTEMS:**

ALL PVC SYSTEMS

DETAIL NO.:
MHP-6040

REVISION DATE: 01/2013