


NOTES:

1. SPLICE CLEATS ARE REQUIRED WHEN FACE SIZE IS 4" OR GREATER. SPLICE CLEATS ARE INSTALLED 24" ON CENTER USING FOUR APPROVED FASTENERS. (MUST POSITION A CLEAT AT EACH JOINT)
2. FASTENERS ARE SPACED NO GREATER THAN 6" ON CENTER.
3. WHEN MORE THAN ONE ARCHED DRIP EDGE IS USED, INSTALL THE DRIP EDGE TO SHED WATER DOWN THE ARCH BY CENTERING ONE SECTION AT THE TOP OF THE ARCH.
4. EDGES PRE-NOTCHED FOR AN OVERLAPPED JOINT. APPLY UNIVERSAL SINGLE PLY SEALANT AT ALL JOINTS.
5. MUST USE TAPE PRIMER WITH CURED COVER TAPE
6. USE STAINLESS STEEL FASTENERS WHEN ATTACHING INTO ACQ TREATED WOOD.

NOTE:

THIS DETAIL QUALIFIES TO BE INCLUDED IN ANY MULE-HIDE LABOR AND MATERIAL WARRANTY

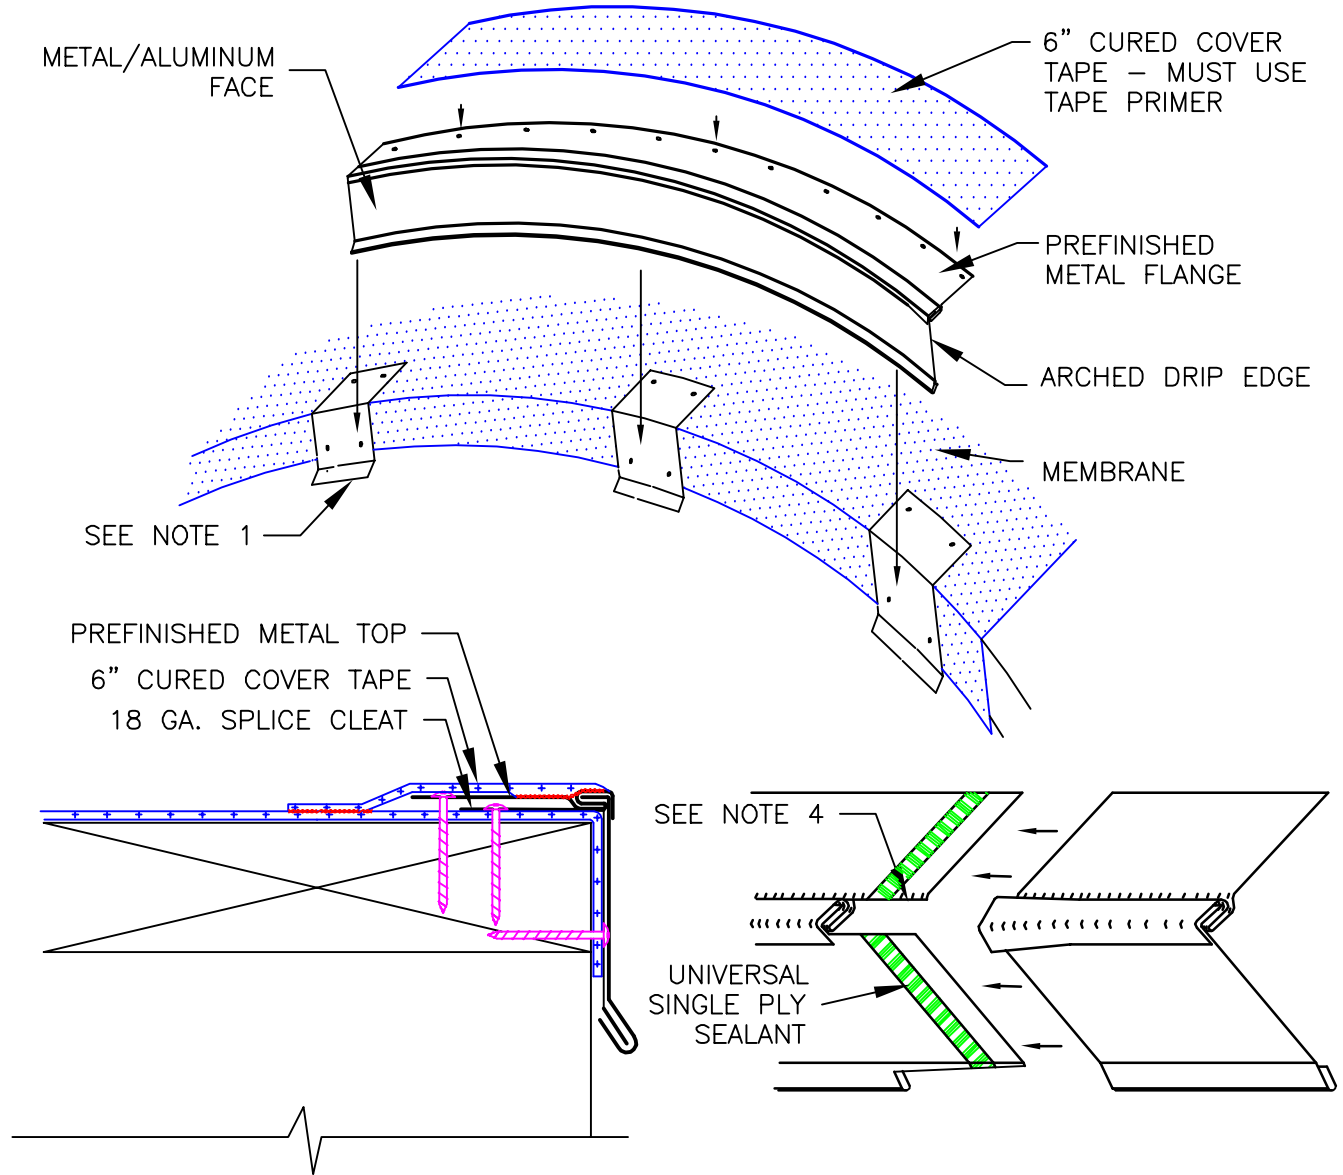

**MULE-HIDE  
PRODUCTS CO., INC.**

**MULE-HIDE PREMANUFACTURED  
ARCHED DRIP EDGE WITH SPLICE CLEAT  
SYSTEMS:**

**ALL EPDM SYSTEMS**

**DETAIL NO.:**  
**MHE-6040**

REVISION DATE: 01/2013