


MINIMUM 6" X 6" WHITE UNCURED EPDM PATCH OR WHITE PRECUT CORNER PATCH CENTERED OVER SEAM AT TRANSITION. MUST USE EPDM TAPE PRIMER OR LOW VOC PRIMER.

UNIVERSAL SINGLE PLY SEALANT IS REQUIRED ON ALL EDGES OF UNCURED EPDM.

CONDITION 1 – WHEN RUSS IS USED

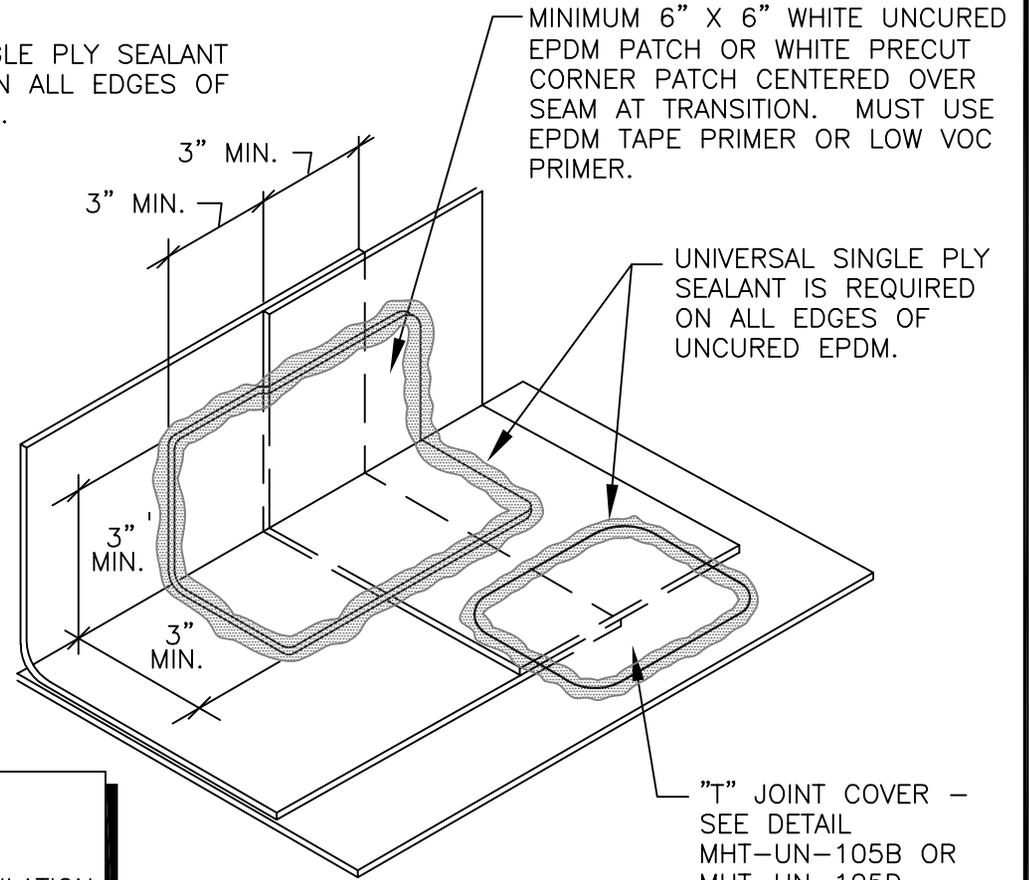

MINIMUM 6" X 6" WHITE UNCURED EPDM PATCH OR WHITE PRECUT CORNER PATCH CENTERED OVER SEAM AT TRANSITION. MUST USE EPDM TAPE PRIMER OR LOW VOC PRIMER.

UNIVERSAL SINGLE PLY SEALANT IS REQUIRED ON ALL EDGES OF UNCURED EPDM.

"T" JOINT COVER – SEE DETAIL MHT-UN-105B OR MHT-UN-105D

CONDITION 2 – WHEN RUSS IS NOT USED

NOTES:

1. DETAIL TO BE USED IN CONJUNCTION WITH STANDARD GUIDE SPECIFICATION CONTAINING REQUIREMENTS FOR NAILERS, INSULATION, ETC.
2. FIELD / WALL TRANSITION PATCHES ARE REQUIRED ON ALL JOBS.

**MULE-HIDE
PRODUCTS CO., INC.**

**UNCURED EPDM
SEAM PATCH AT FIELD / WALL TRANSITION
SYSTEMS:**

ALL TPO SYSTEMS

DETAIL NO.:

MHT-UN-105E

REVISION DATE: 06/2017