



(A)

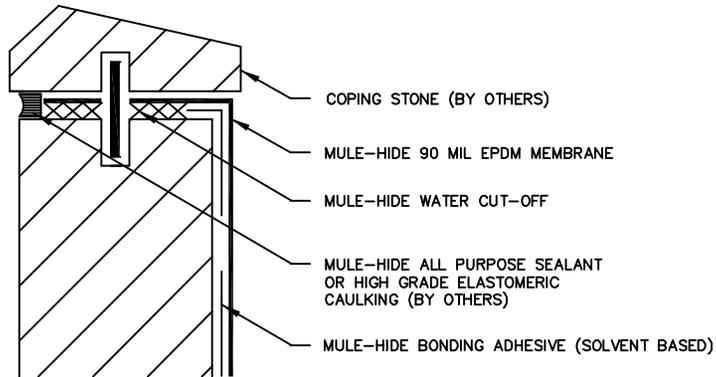


(B)

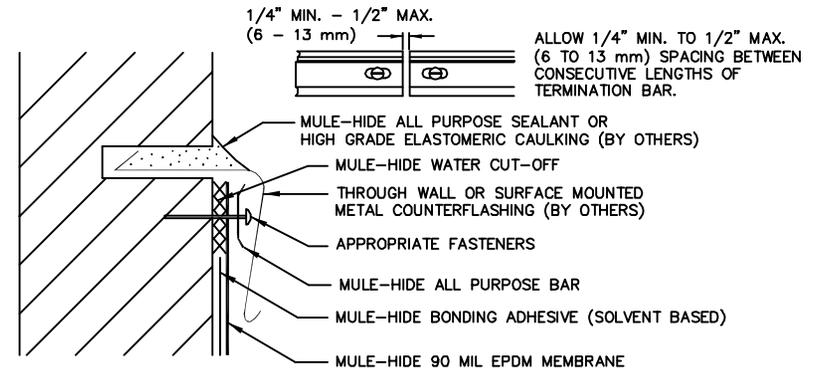

NOTES:

1. APPLY ON HARD SMOOTH SURFACE ONLY; NOT FOR USE ON WOOD.
2. WATER CUT-OFF MUST BE HELD UNDER CONSTANT COMPRESSION.
3. DO NOT WRAP COMPRESSION TERMINATION AROUND CORNERS.

(C)

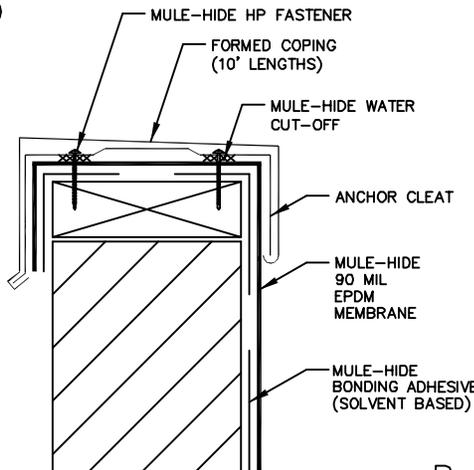


NOTES:

1. WATER CUT-OFF SHALL BE APPLIED AROUND EACH SLOT AND FASTENER HOLE.
2. REFER TO METAL-ERA PERMA-TITE COPING INSTALLATION INSTRUCTION MANUAL FOR STEP-BY-STEP INSTRUCTION PROCEDURES.

Perma-Tite COPING

(D)

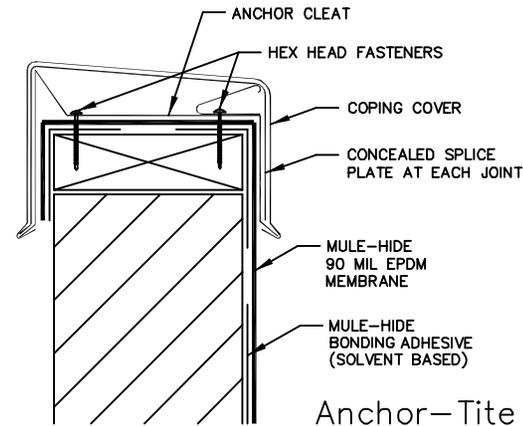

NOTE:

REFER TO METAL-ERA ANCHOR-TITE INSTALLATION INSTRUCTION MANUAL FOR STEP-BY-STEP INSTRUCTION PROCEDURES.

Anchor-Tite COPING

**MULE-HIDE
PRODUCTS CO., INC.
2005**

Vertical Flashing Terminations

SYSTEMS:
Fully Adhered 90mil System

DETAIL NO.:
MHE-522