


NOTES:

1. CLEAN AND PRIME AN 18" WIDE STRIP OF THE EXISTING ROOF SURFACE.
2. SET TPO REINFORCED MEMBRANE IN MULE-HIDE #420 MOD BIT ADHESIVE, BRUSH GRADE ON TOP OF EXISTING BUILT UP ROOFING.
3. USE ONE PLY OF MULE-HIDE SA BASE AND ONE PLY OF MULE-HIDE SA CAP SHEET TO PRIMED SURFACE OR SET 2 PLIES OF TYPE VI FIBERGLASS FELTS IN LAYERS OF MULE-HIDE #420 MOD BIT ADHESIVE, BRUSH GRADE. BOTTOM LAYER - 9" WIDE AND TOP LAYER - 12" WIDE (MIN).
4. COAT SURFACE WITH MULE-HIDE #102 FIBRATED ROOF COATING.
5. APPROXIMATELY 1/8" DIAMETER BEAD OF CUT-EDGE SEALANT IS REQUIRED ON CUT EDGES OF TPO REINFORCED MEMBRANE.

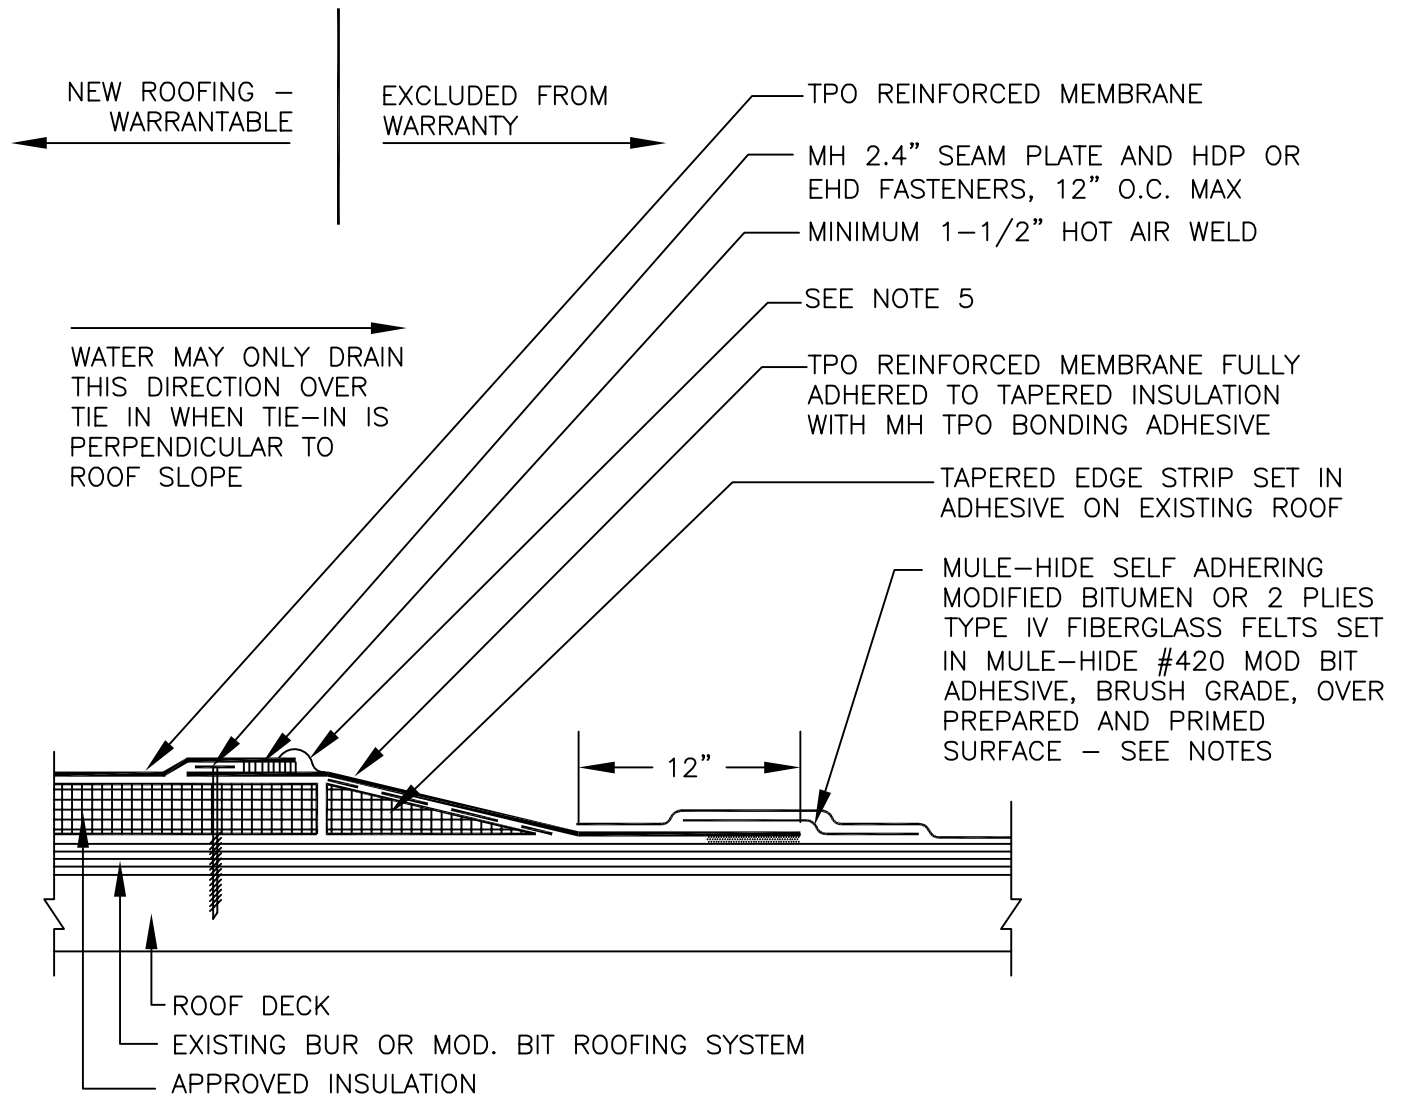

**MULE-HIDE
PRODUCTS CO., INC.**

**TIE-IN TO EXISTING BUR / MOD BIT ROOF
RECOVER SITUATION
SYSTEMS:
ALL TPO SYSTEMS**

DETAIL NO.:
MHT-UN-610A
REVISION DATE: 10/2013