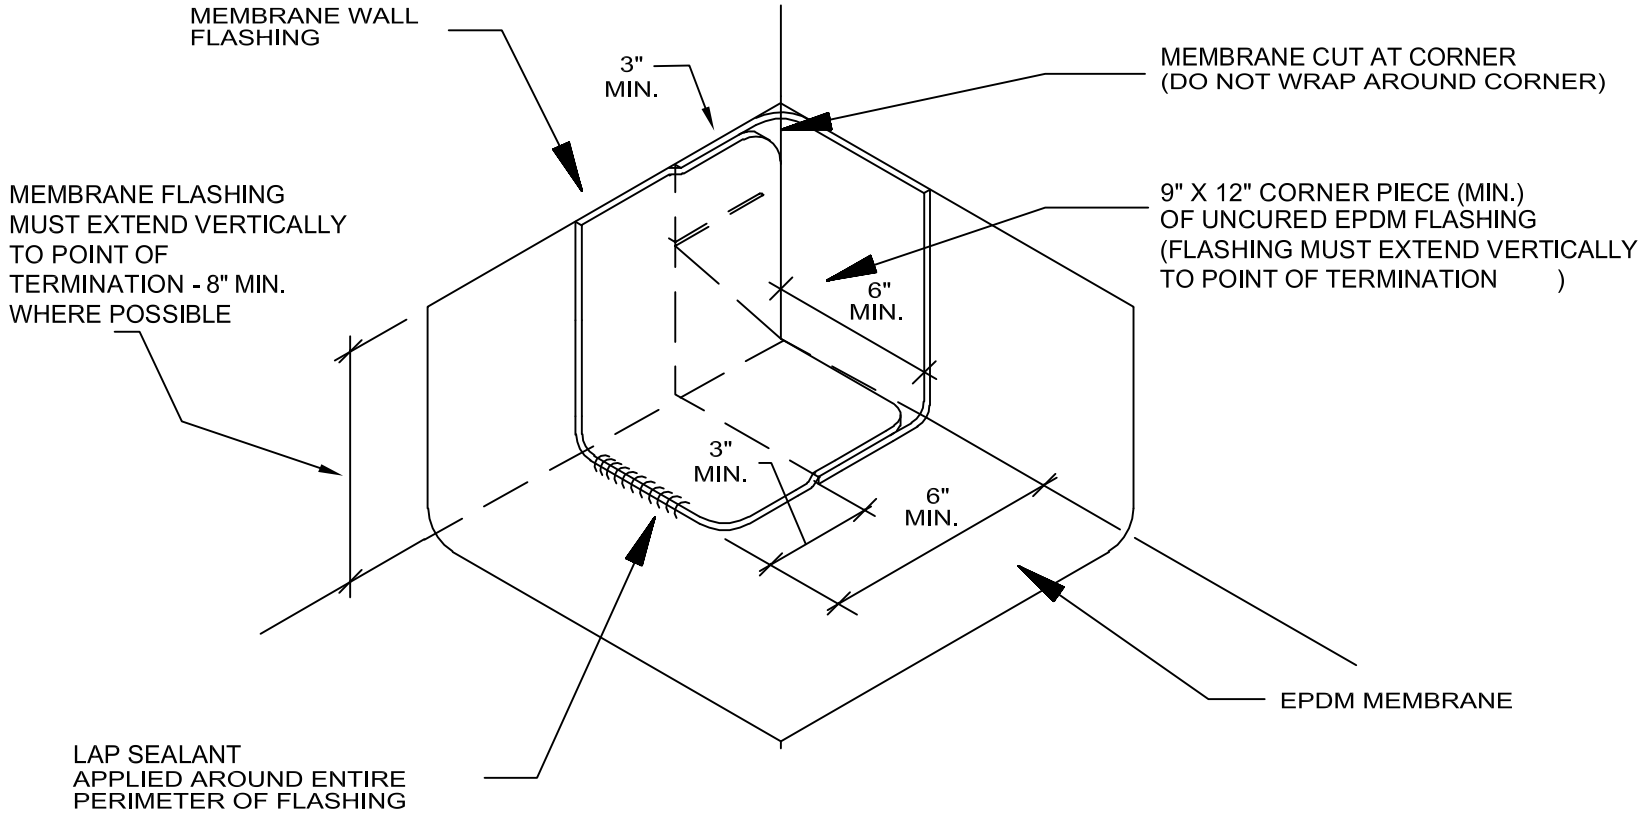

NOTE: WHEN USING UNCURED EPDM FLASHING, SPLICE ADHESIVE AND SEAM CLEANER ARE REQUIRED. WHEN USING FLASHING TAPE, TAPE PRIMER IS REQUIRED TO PREP ALL SURFACES TO WHICH THE FLASHING TAPE WILL BE APPLIED. SPLICE ADHESIVE IS REQUIRED TO ADHERE THE "PIG EAR".

MULE-HIDE PRODUCTS CO., INC. **04/01/2004**	2 PIECE INSIDE CORNER EPDM WALL FLASHING	DETAIL NO.: MHE-184
	SYSTEMS: ALL	